



FEDERAL DOUBLE, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2503HR

GENERAL NOTES

- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

NOTICE


- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- THIS PRODUCT IS RATED FOR FOUR 60W MAX TYPE A BULBS

CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.









WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

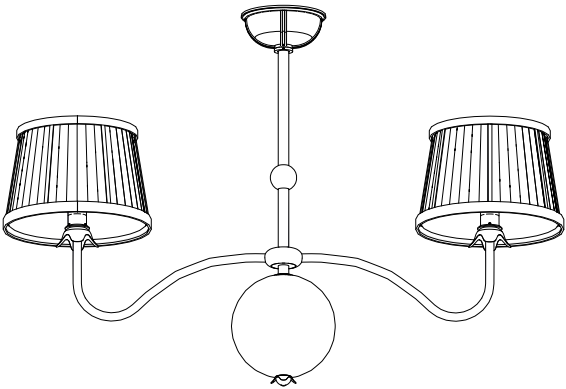

COMPONENTS PROVIDED FOR INSTALLATION

BOX 1

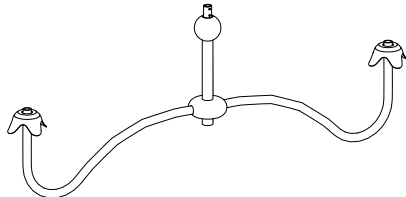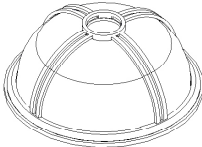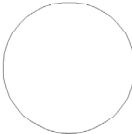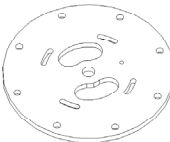FIXTURE BODY 	CANOPY 	ELECTRICAL-TOP BODY (X2) 	ELECTRICAL-CLUSTER (X2) 	BALL (X2) 	
CANOPY COLLAR 	DOWNROD 	THUMB SCREWS (X8) 	HEX NUT (X8) 	PAN HEAD SCREW (X8) 	BULBS (X4) 
MOUNTING PLATE 	LOCK NUT 	MOUNTING SCREW (X8) 	HEX WRENCH 	WIRE NUTS (X2) 	LOCTITE 




FEDERAL DOUBLE, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2503HR


BOX 2

GLASS ASSEMBLY
(OPTIONAL)

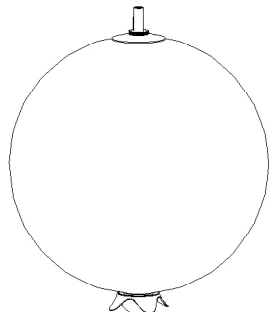


BOX 3

SHADE

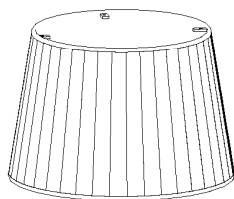


DIFFUSER

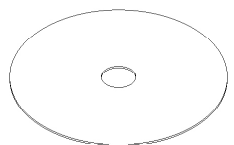


BOX 4

SHADE

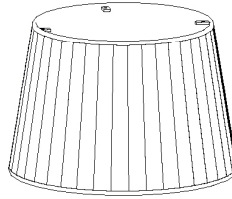


DIFFUSER

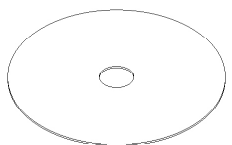


BOX 5

SHADE HOLDER

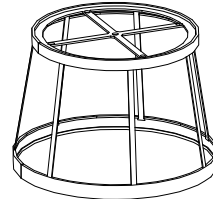

BOX 6

SHADE HOLDER

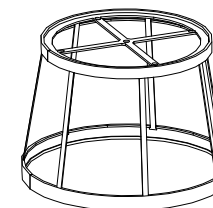


MOUNTING INSTRUCTIONS - 2 PERSON INSTALL

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.

STEP 2


LOCATE JUNCTION BOX AND POSITION MOUNTING PLATE IN DESIRED LOCATION. MARK AND DRILL 8 HOLES FOR MOUNTING SCREWS. SET MOUNTING PLATE ASIDE.

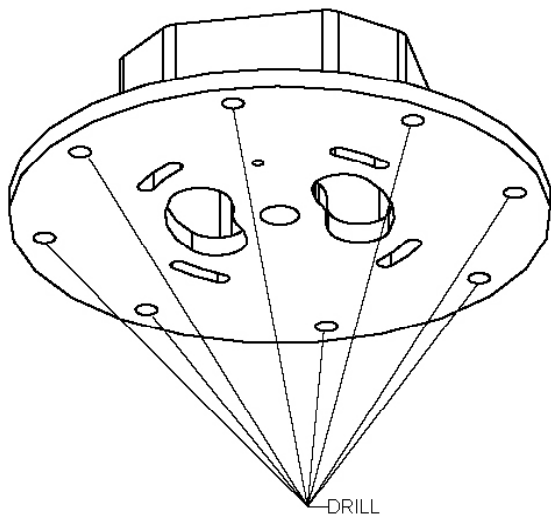

STEP 3

ATTACH DOWNROD NIP TO COUPLER ON FIXTURE BODY AND TIGHTEN SET SCREW WITH PROVIDED HEX WRENCH. SLIP DOWNROD SLEEVE OVER NIP AND SCREW DOWN UNTIL SNUG ON FIXTURE BODY.

FOR EXTENDED DOWNROD MOUNTING THERE WILL BE AN ADDITIONAL DOWNROD WITH A COUPLER IN BETWEEN THE TWO. TIGHTEN SET SCREWS IN COUPLER AFTER INSTALLING DOWNRODS.

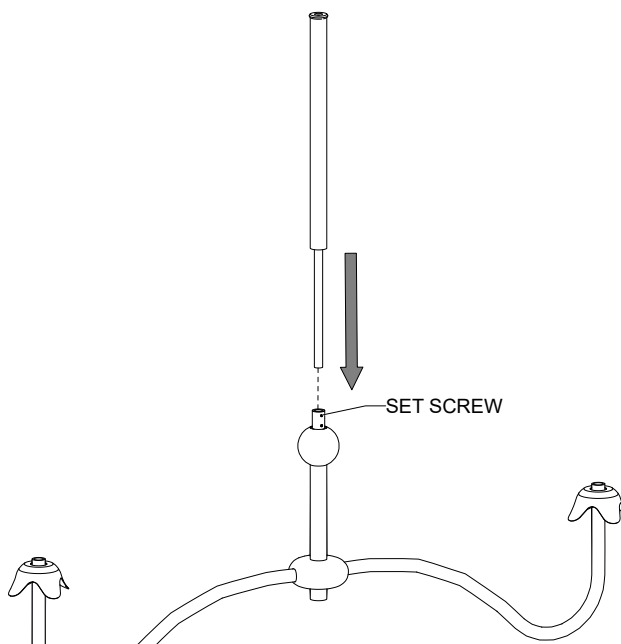



FEDERAL DOUBLE, HR


ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2503HR

STEP 4


LOOSEN SET SCREWS IN CANOPY COLLAR AND SLIDE DOWN LENGTH OF DOWNROD FOLLOWED BY THE CANOPY.

BE CAREFUL TO AVOID SCRATCHING FINISH.

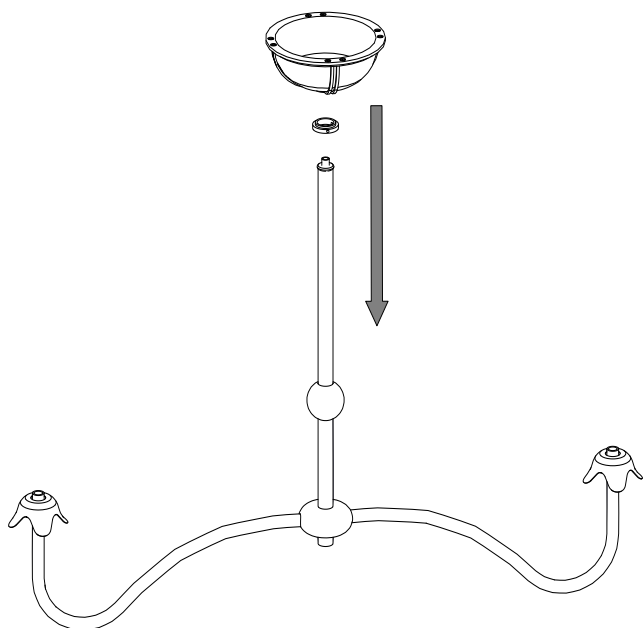


STEP 5

ATTACH MOUNTING PLATE TO DOWNROD NIP WITH HEX NUT.

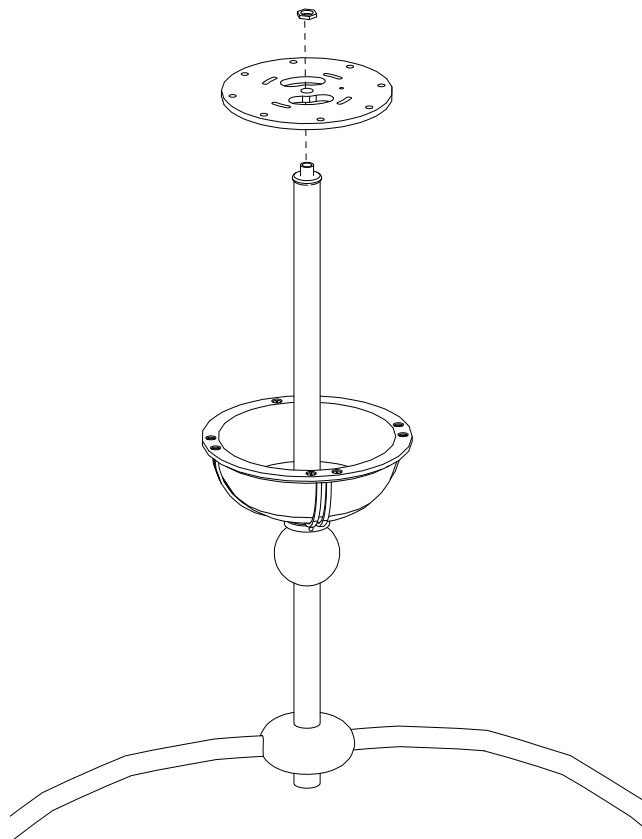

STEP 6

LIFT FIXTURE TO CEILING AND ATTACH TO CEILING WITH MOUNTING SCREWS.

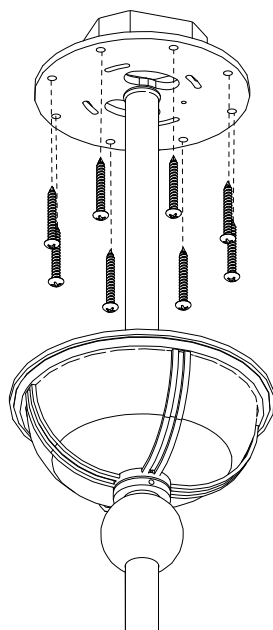

STEP 7

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

IMPORTANT: NEVER ALLOW FIXTURE TO "HANG" FROM ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT PRESSURE ON THE CONNECTIONS. THE WEIGHT OF THE FIXTURE SHOULD BE SUPPORTED BY THE MOUNTING ASSEMBLY.




FEDERAL DOUBLE, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2503HR


STEP 8

LIFT CANOPY TO CEILING FOLLOWED BY THE COLLAR. TIGHTEN THE 3 SET SCREWS EVENLY AROUND COLLAR TO HOLD IN PLACE.

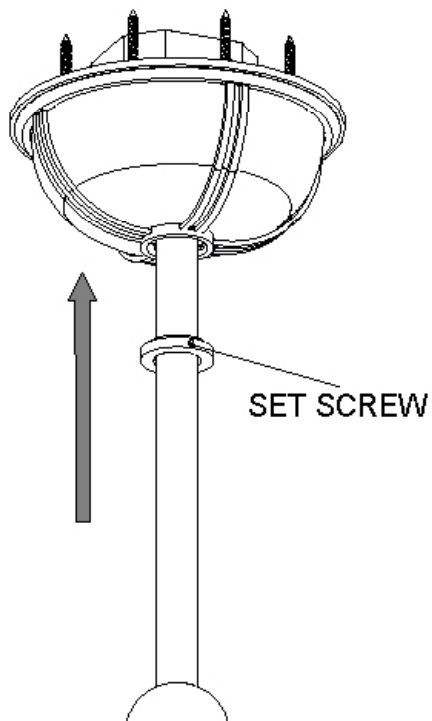

STEP 9


ATTACH TOP BODY OF ELECTRICAL TO CLUSTER WITH PAN HEAD SCREWS.

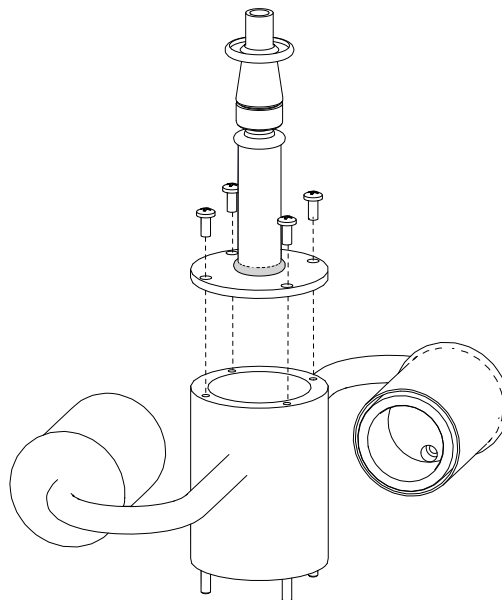

STEP 10

PLACE DIFFUSERS ON ARMS OF FIXTURE BODY.


MAKE ELECTRICAL CONNECTIONS FROM ELECTRICAL CLUSTERS TO ARMS OF FIXTURE BODY. TUCK WIRES INTO CLUSTERS AND ATTACH TO ARMS WITH 4 HEX NUTS AT EACH ARM.

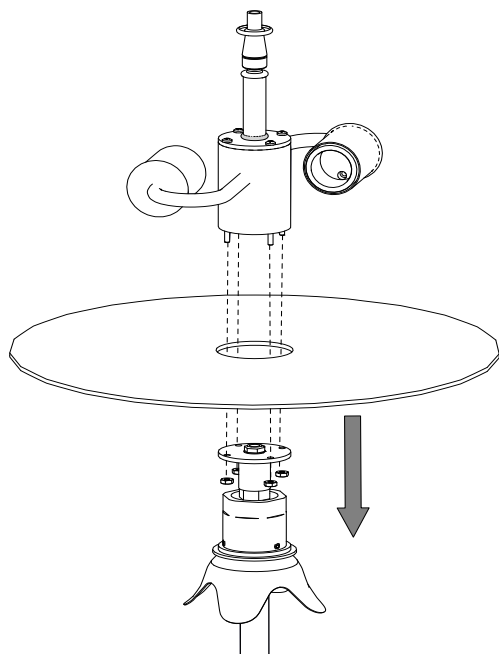

STEP 11

INSERT SHADE INTO SHADE HOLDER. SECURE WITH FOUR THUMB SCREWS.

REPEAT FOR REMIANING SHADE.

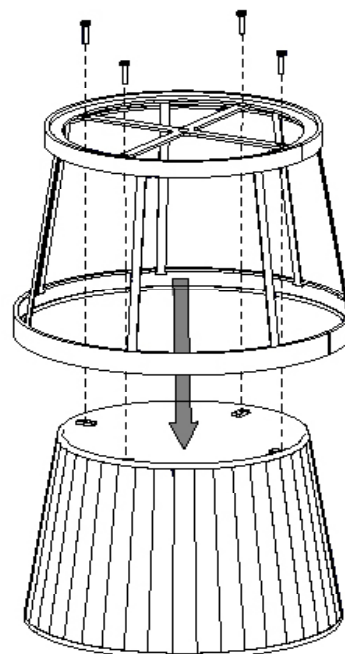



FEDERAL DOUBLE, HR


ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2503HR

STEP 12


INSTALL BULBS

PLACE SHADE ON TOP OF ELECTRICAL CLUSTER AND SECURE WITH BALL. REPEAT FOR REMAINING SHADE.

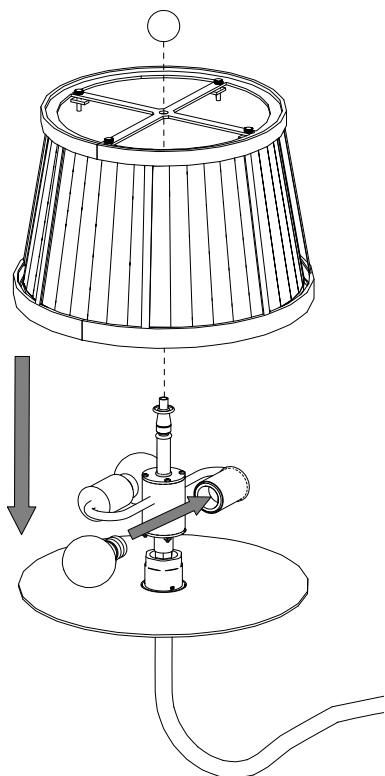

STEP 13

FOR GLOBE OPTION: APPLY LOCTITE TO THREADS ON TOP OF GLOBE ASSEMBLY. SCREW GLOBE ASSEMBLY INTO CENTER OF FIXTURE BODY AT BASE.

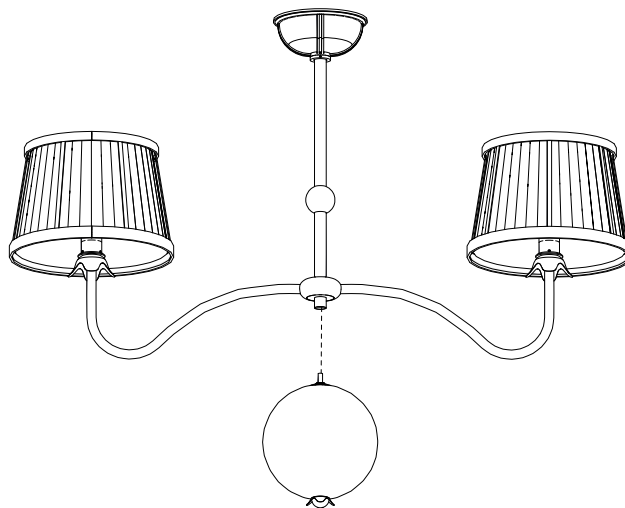

STEP 14

RETURN POWER TO CIRCUIT. CONFIRM PROPER OPERATION OF FIXTURE.

ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR INFO@URBANELECTRICCO.COM