



HARROGATE ASSEMBLY AND MOUNTING INSTRUCTIONS

JG-3600

GENERAL NOTES


- THIS LUMINAIRE IS SUITED FOR WET LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- THIS PRODUCT IS RATED THREE 60W MAX, TYPE B BULB(S).
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.


WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING THE POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

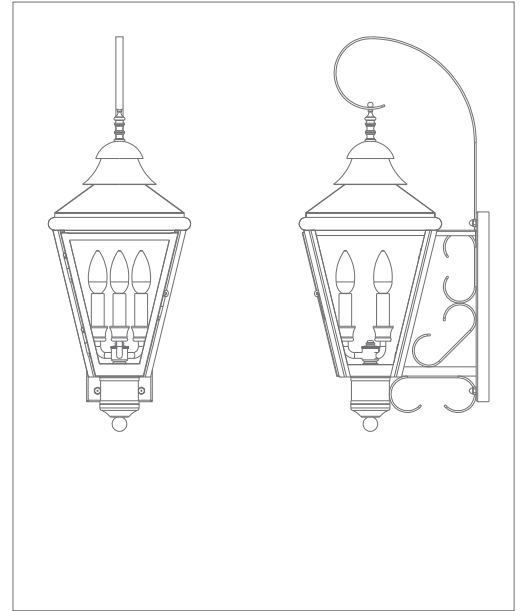


COMPONENTS PROVIDED FOR INSTALLATION


WOOD SCREWS

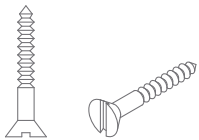


MACHINE SCREWS

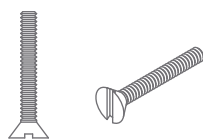

WIRE NUTS



EXPANSION ANCHORS



CANDELABRA BULB(S)





HARROGATE ASSEMBLY AND MOUNTING INSTRUCTIONS

JG-3600

MOUNTING INSTRUCTIONS

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.

STEP 2

TAKING CAREFUL MEASUREMENT, INSTALL ANCHOR STUDS INTO WALL AT APPROPRIATE LOCATIONS, ENSURING THAT ALL FOUR STUDS WILL SLIP THROUGH HOLES IN FIXTURE BACKPLATE.

STEP 3

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE. IMPORTANT: DO NOT ALLOW FIXTURE TO "HANG" FROM ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT PRESSURE ON THE CONNECTIONS.

STEP 4

SLIP THE FIXTURE OVER THE ANCHOR STUDS. ATTACH THE ACORN CAPS TO EACH OF THE FOUR STUDS AND HAND-TIGHTEN ALL ACORN CAPS. ONCE ALL ACORN CAPS ARE INSTALLED AND HAND-TIGHTENED, COME BACK AND TIGHTEN THE ACORN CAPS WITH A SMALL WRENCH. BE CAREFUL TO AVOID SCRATCHING THE FINISH ON THE FIXTURE.

STEP 5

INSTALL LIGHT BULB/S IN FIXTURE SOCKET AND RESTORE POWER TO THE CIRCUIT.

STEP 6

CONFIRM PROPER OPERATION OF THE LIGHT FIXTURE.

MOUNTING DIAGRAM

ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT:
843.723.8140 OR INFO@URBANELECTRICCO.COM