



# LONGWOOD, HR

## ASSEMBLY AND MOUNTING INSTRUCTIONS

NK-2500HR

### GENERAL NOTES

- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

#### NOTICE

- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- THIS PRODUCT IS RATED FOR FIVE 60W MAX TYPE B BULBS

#### CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.

#### WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.



### COMPONENTS PROVIDED FOR INSTALLATION

#### CRATE

<b>FIXTURE BODY</b> 			<b>SHADE (X5)</b> 		<b>CANOPY</b> 		<b>CENTER BALL</b> 	
<b>DOWNROD HORN</b> 	<b>BODY ALL-THREAD</b> 	<b>DOWNROD TUBE &amp; ALLTHREAD</b> 	<b>MOUNTING ASSEMBLY</b> 		<b>BULBS (X5)</b> 	<b>SHADE PLATE</b> 		<b>THUMB SCREWS (X10)</b> 
			<b>HALF BALL</b> 	<b>LOCKNUT</b> 	<b>JUNCTION BOX SCREWS (X2)</b> 	<b>HEX WRENCH</b> 		<b>WIRENUTS (X2)</b> 




**MOUNTING INSTRUCTIONS - 3 PERSON INSTALL**

**STEP 1**

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


**STEP 2**

ATTACH BODY ALLTHREAD TO TOP COUPLER ON FIXTURE BODY AND TIGHTEN SET SCREW. SLIP DOWNROD HORN OVER ALLTHREAD AND SCREW DOWN CENTER BALL.

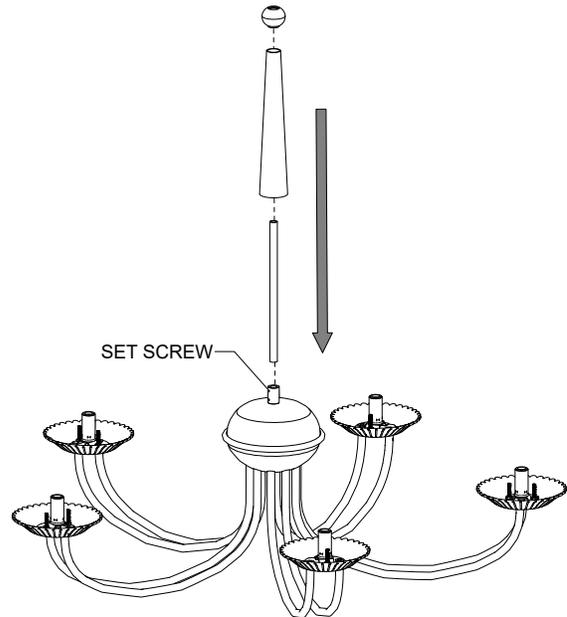


**STEP 3**

THREAD DOWNROD ALLTHREAD INTO CENTER BALL AND SLIP DOWNROD TUBE OVER ALLTHREAD.

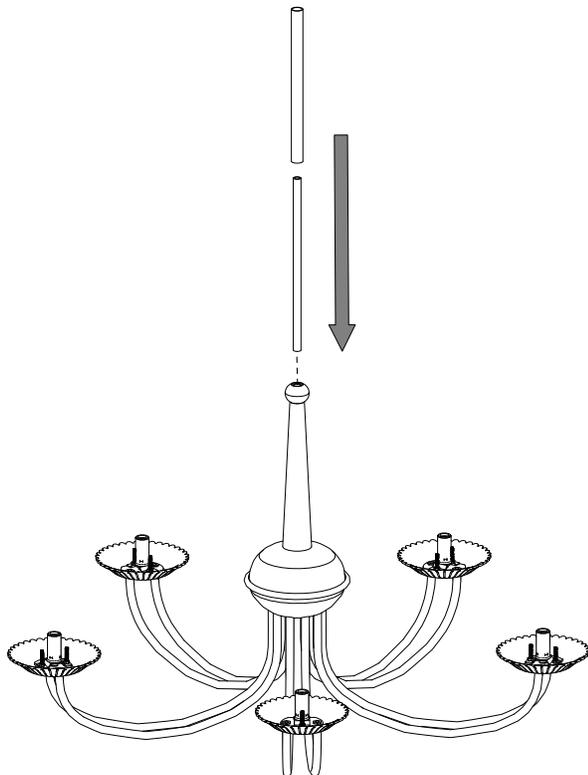

**STEP 4**

REMOVE SCREW COLLAR FROM MOUNTING ASSEMBLY AND SET ASIDE. DETTACH MOUNTING BRACKET FROM MOUNTING PLATE BY REMOVING HEX NUTS.

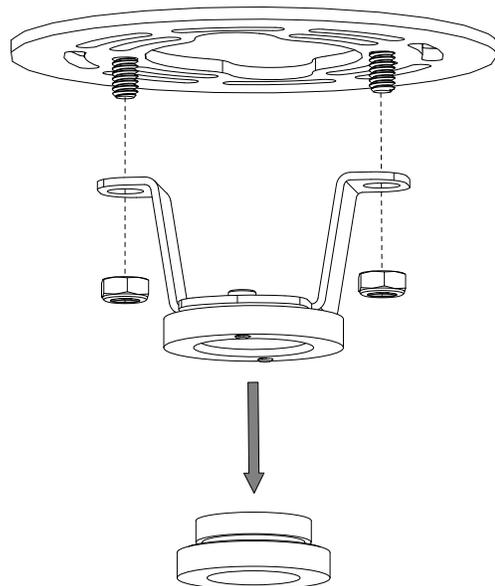




# LONGWOOD, HR


## ASSEMBLY AND MOUNTING INSTRUCTIONS

NK-2500HR


**STEP 5**  
ATTACH MOUNTING PLATE TO JUNCTION BOX WITH  
JUNCTION BOX SCREWS

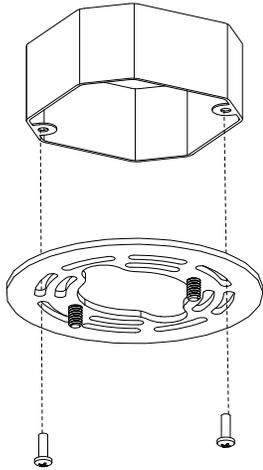

**STEP 6**  
SLIP SCREW COLLAR, CANOPY, AND MOUNTING BRACKET  
OVER DOWNROD. ATTACH HALF BALL TO ALLTHREAD AND  
SECURE WITH LOCKNUT AND SET SCREW.

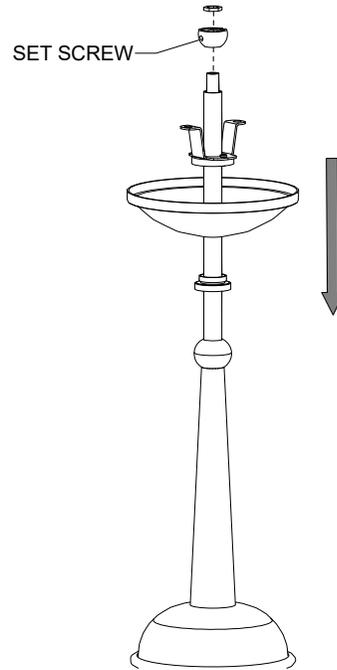

**STEP 7**  
LIFT FIXTURE TO CEILING. REATTACH MOUNTING BRACKET  
TO MOUNTING PLATE WITH HEX NUTS

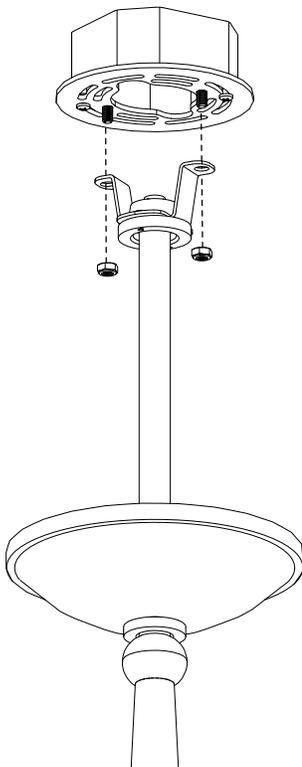

**STEP 8**  
USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL  
CONNECTIONS BY FOLLOWING THE ELECTRICAL  
CONFIGURATION TABLE BELOW. ENSURE THAT ALL  
ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED  
ELECTRICAL TAPE.

**IMPORTANT: NEVER ALLOW FIXTURE TO “HANG” FROM  
ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT  
PRESSURE ON THE CONNECTIONS. THE WEIGHT OF THE  
FIXTURE SHOULD BE SUPPORTED BY THE MOUNTING  
ASSEMBLY.**




**LONGWOOD, HR**  
ASSEMBLY AND MOUNTING INSTRUCTIONS

NK-2500HR


**STEP 9**

LIFT CANOPY TO CEILING SECURE IN PLACE WITH SCREW COLLAR.

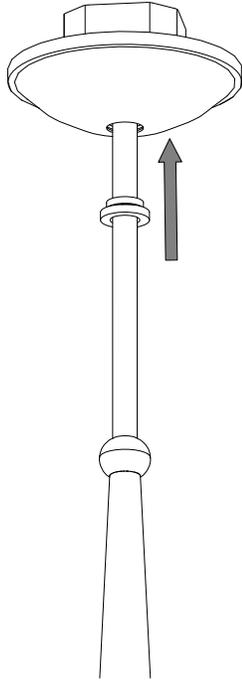


**STEP 10**

SET SHADES ONTO FLOWER CUPS AND ATTACH WITH SHADE PLATE AND THUMB SCREWS.

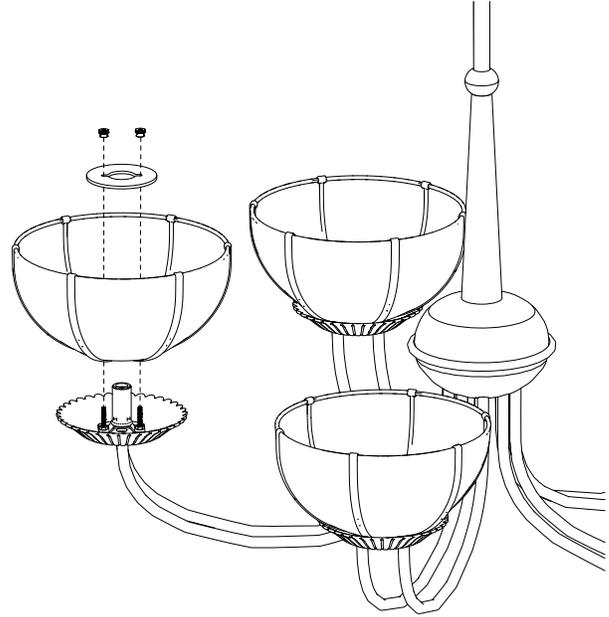

**STEP 11**

INSTALL BULBS. RETURN POWER TO CIRCUIT. CONFIRM PROPER OPERATION OF FIXTURE.

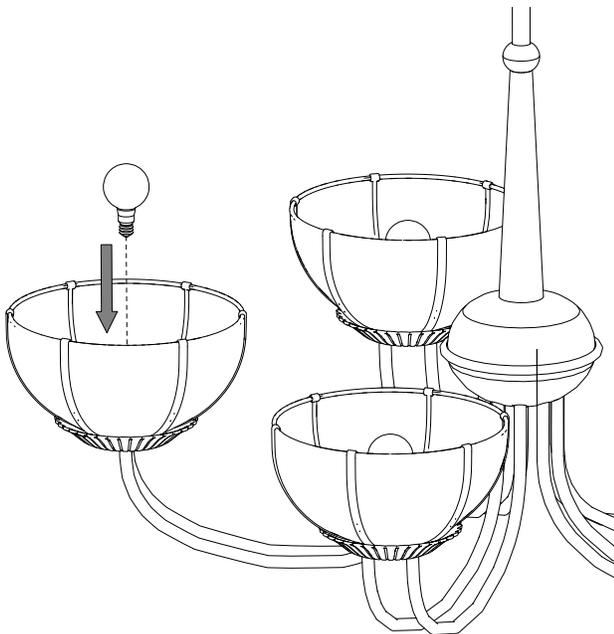

**ELECTRICAL CONFIGURATION TABLE**

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

**GENERAL NOTE:** USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR [INFO@URBANELECTRICCO.COM](mailto:INFO@URBANELECTRICCO.COM)