



MARGAUX

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2303HR

GENERAL NOTES

- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

NOTICE


- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- THIS PRODUCT IS RATED FOR TWO 60W TYPE A BULBS

⚠ CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.


⚠ WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

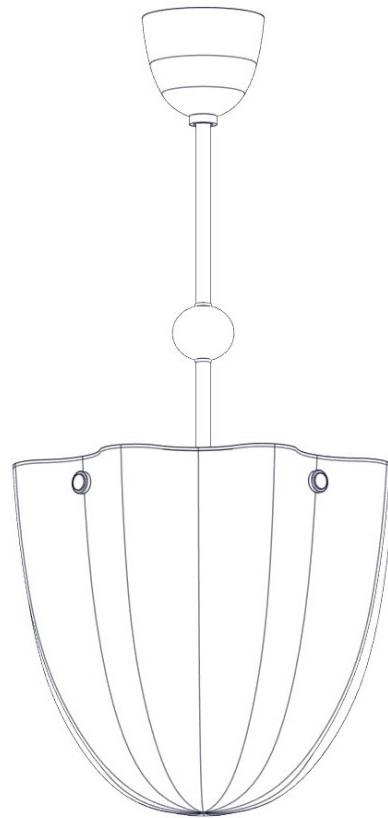


COMPONENTS PROVIDED FOR INSTALLATION

BOX 1

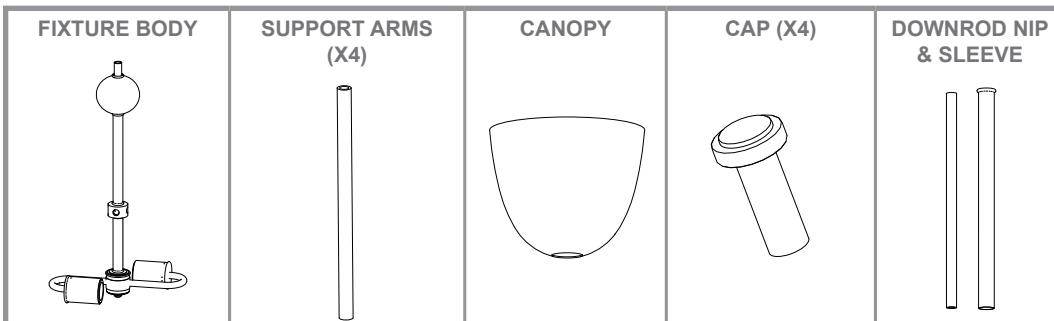

MOUNTING ASSEMBLY



HEX WRENCH




WIRENUTS (X2)



JUNCTION BOX SCREWS (X2)



BOX 2

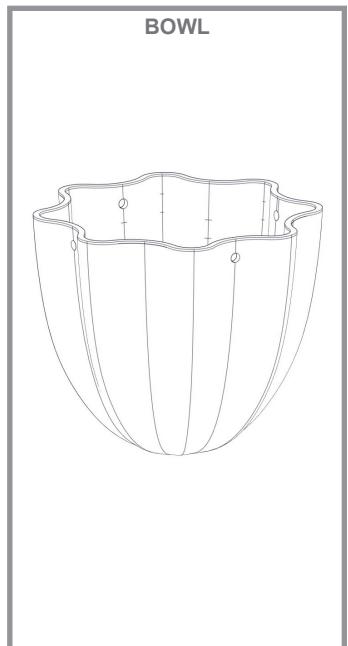



MARGAUX

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2303HR


MOUNTING INSTRUCTIONS - 2 PERSON INSTALL

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


STEP 2

REMOVE SCREW COLLAR FROM MOUNTING ASSEMBLY AND SET ASIDE.

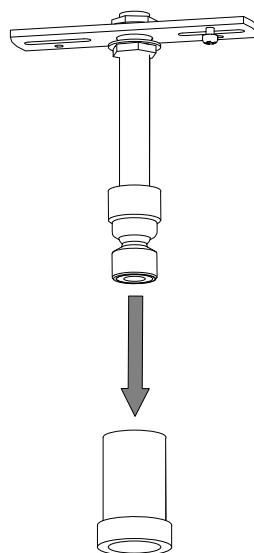

STEP 3


INSTALL SUPPORT ARMS INTO FIXTURE BODY. 1/4" THREADS FEED INTO FIXTURE.

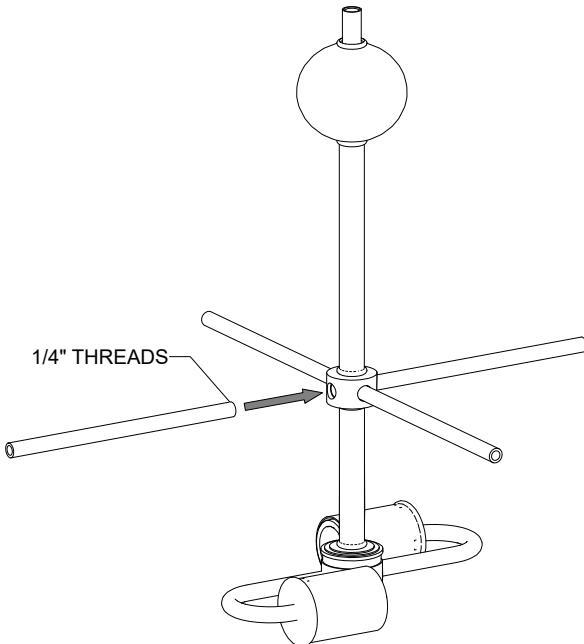

STEP 4

ATTACH DOWNROD NIP TO COUPLER AND SLIP DOWNROD SLEEVE OVER NIP.

FOR EXTENDED DOWNROD MOUNTING THERE WILL BE AN ADDITIONAL DOWNROD WITH A COUPLER IN BETWEEN THE TWO. TIGHTEN SET SCREWS IN COUPLER AFTER INSTALLING DOWRODS.

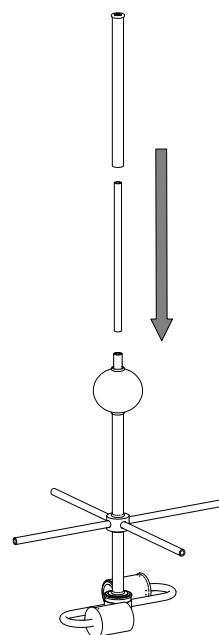




MARGAUX

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2303HR


STEP 5

CAREFULLY SLIDE SCREW COLLAR AND CANOPY OVER DOWNROD AND LET REST ON CENTER BALL. BE CAREFUL NOT TO SCRATCH FIXTURE.

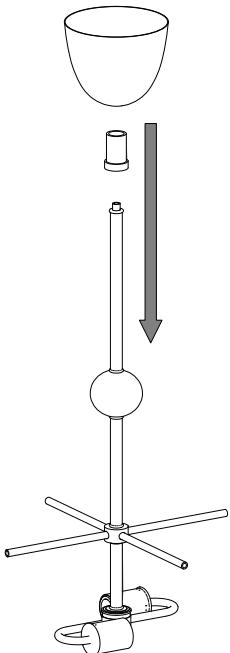


STEP 6

SCREW MOUNTING ONTO DOWNROD NIP.

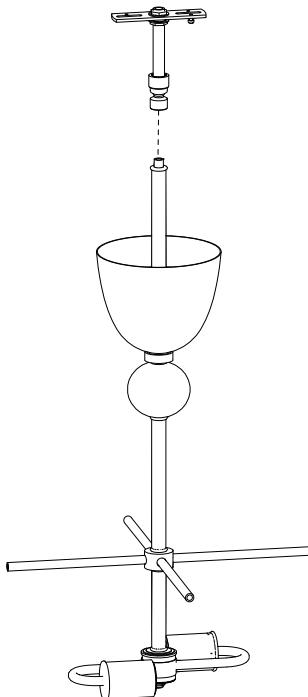

STEP 7

LIFT FIXTURE TO CEILING AND ATTACH CROSSBOAR TO JUNCTION BOX WITH JUNCTION BOX SCREWS.

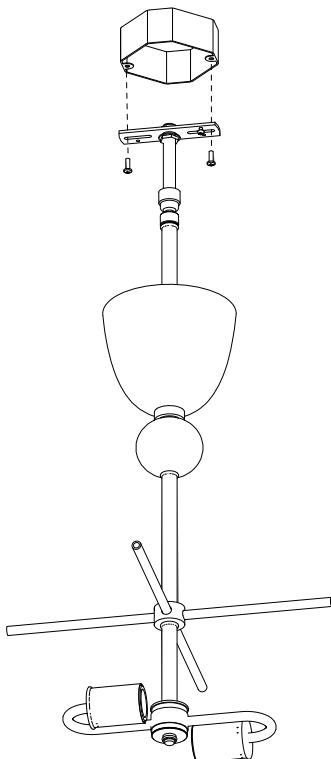

STEP 8

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

IMPORTANT: NEVER ALLOW FIXTURE TO "HANG" FROM ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT PRESSURE ON THE CONNECTIONS. THE WEIGHT OF THE FIXTURE SHOULD BE SUPPORTED BY THE MOUNTING ASSEMBLY.




MARGAUX

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2303HR


STEP 9

LIFT CANOPY TO CEILING. SECURE IN PLACE WITH SCREW COLLAR.

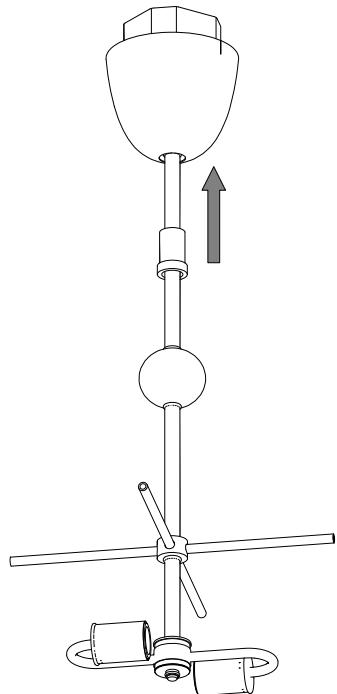


STEP 10

INSTALL THE LIGHT BULBS IN THE FIXTURE SOCKETS AND RESTORE POWER TO THE CIRCUIT. CONFIRM PROPER OPERATION OF THE LIGHT FIXTURE.

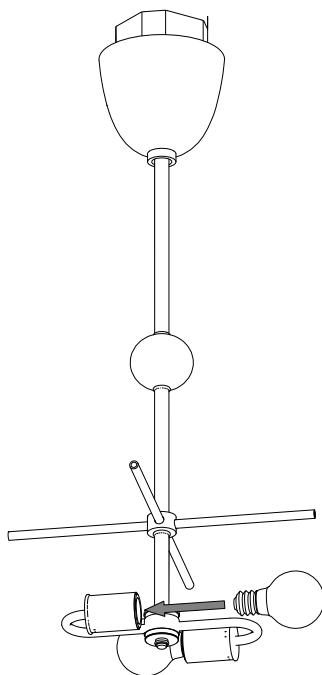

STEP 11

LIFT BOWL TO FIXTURE AND LINE UP HOLES WITH SUPPORT ARMS. SECURE BOWL IN PLACE BY SLIDING CAPS THROUGH HOLES AND SCREWING CAPS ONTO SUPPORT ARMS.

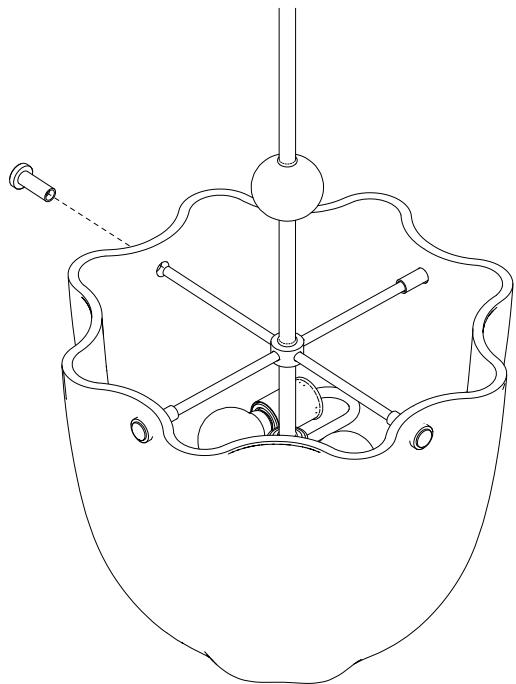



MARGAUX

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2303HR

ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR INFO@URBANELECTRICCO.COM