



## GENERAL NOTES

- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

**NOTICE**


- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- THIS PRODUCT IS RATED FOR 5 10W MAX TYPE T4 BULBS

**⚠ CAUTION**

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.

**⚠ WARNING**

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

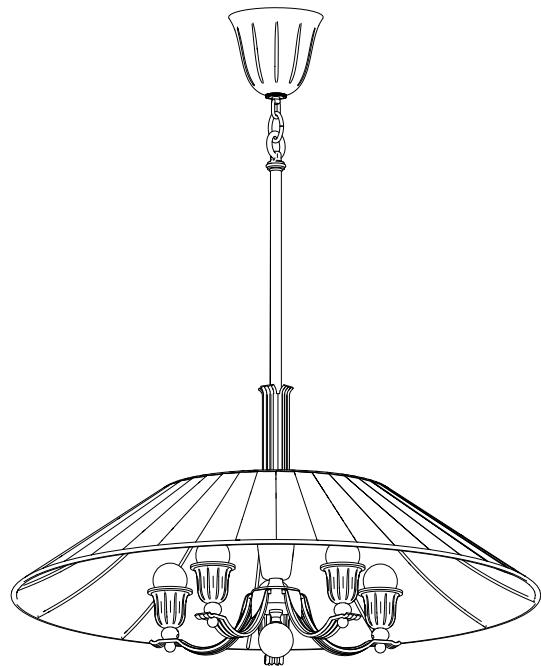

## COMPONENTS PROVIDED FOR INSTALLATION

Fixture Body	Shade	Canopy	Down Rod	Stem
Chain Link	Center Ball	Mounting Assembly	Top Shade Bracket	Bottom Shade Bracket
Shade Bracket Screws (X4)	Loctite	Hex Wrench	Wire Nuts (X2)	Junction Box Screw (X2)
Bulbs (X5)				




## MOUNTING INSTRUCTIONS - 2 PERSON INSTALL

### STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER.  
TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


### STEP 2

INSTALLS BULBS INTO SOCKETS OF FIXTURE BODY.

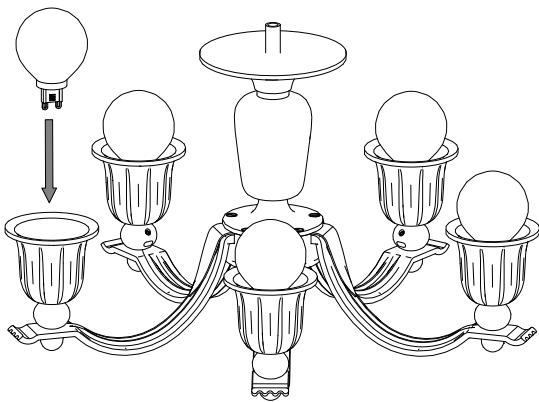


### STEP 3

ATTACH TOP AND BOTTOM SHADE BRACKETS TO SHADE WITH SHADE SCREWS.

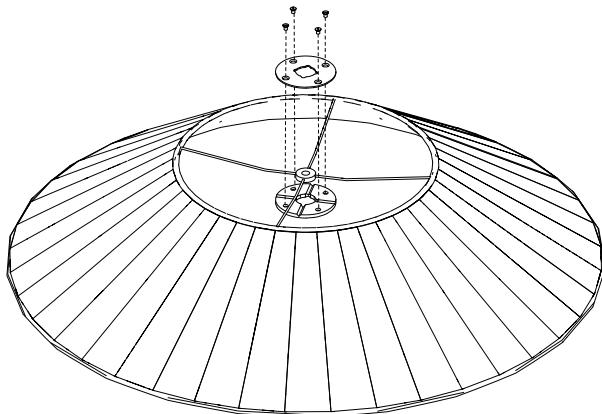

### STEP 4

ATTACH SHADE TO FIXTURE BODY BY SLIPPING IT OVER NIP. SCREW STEM ONTO NIP ON TOP OF SHADE.

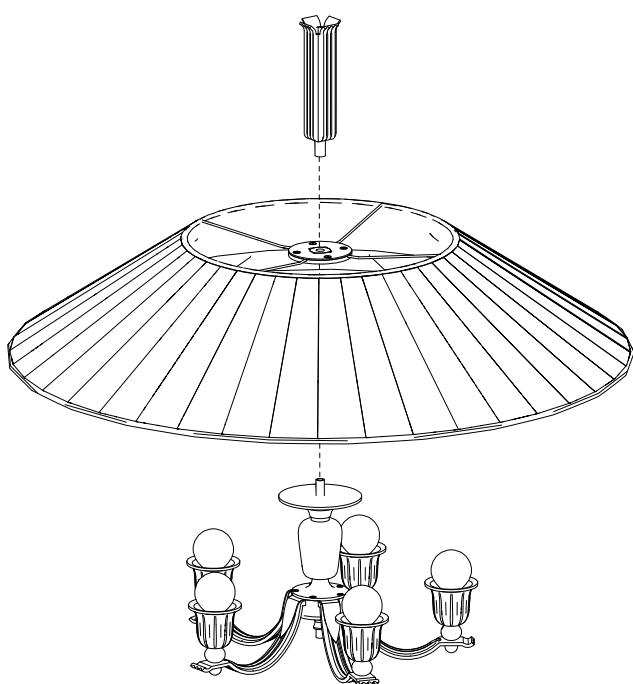



# NILSSON


## ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2468

### STEP 5


APPLY LOCTITE TO END OF DOWN ROD NIP AND SCREW INTO STEM. ATTACH CHAIN LINK TO DOWN ROD LOOP

\*FOR EXTENDED DOWNROD MOUNTING THERE WILL BE AN ADDITIONAL DOWNROD WITH A COUPLER IN BETWEEN THE TWO. TIGHTEN SET SCREWS IN COUPLER AFTER INSTALLING DOWRODS.

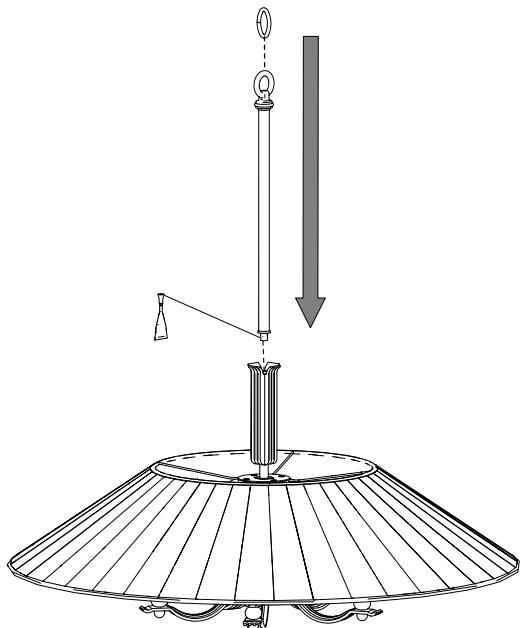


### STEP 6

LIFT FIXTURE TO CEILING AND FEED WIRE THROUGH SCREW COLLAR, CANOPY AND BOTTOM NIP OF MOUNTING ASSEMBLY. ATTACH CHAIN LINK TO MOUNTING LOOP.

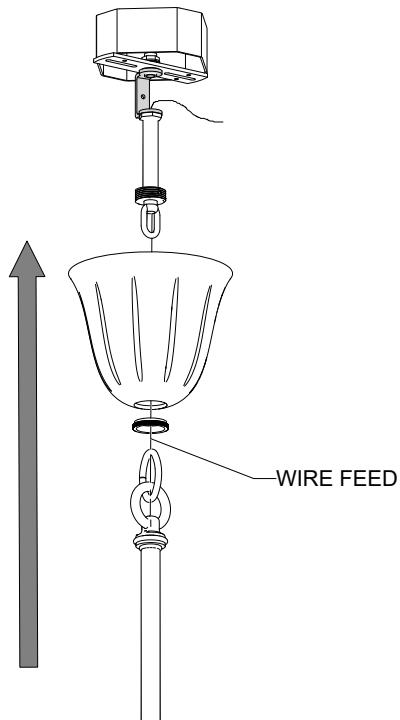

### STEP 6

ATTACH MOUNTING ASSEMBLY TO JUNCTION BOX WITH JUNCTION BOX SCREWS. TIGHTEN SET SCREW IN LOOP. REMOVE SCREW COLLAR AND SET ASIDE.

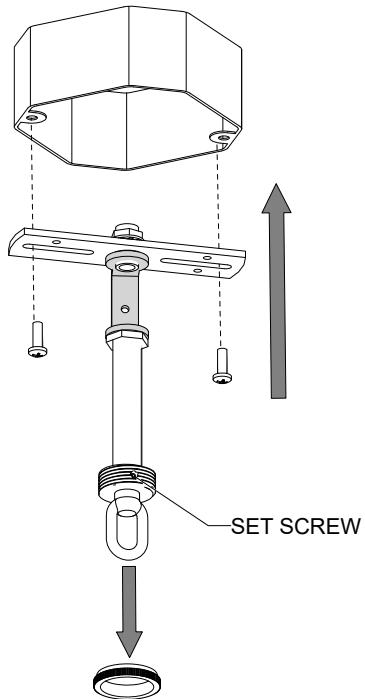

### STEP 7

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

**IMPORTANT: NEVER ALLOW FIXTURE TO "HANG" FROM ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT PRESSURE ON THE CONNECTIONS. THE WEIGHT OF THE FIXTURE SHOULD BE SUPPORTED BY THE MOUNTING ASSEMBLY.**




# NILSSON

## ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2468

### STEP 9


LIFT CANOPY TO CEILING AND SECURE IN PLACE WITH SCREW COLLAR.

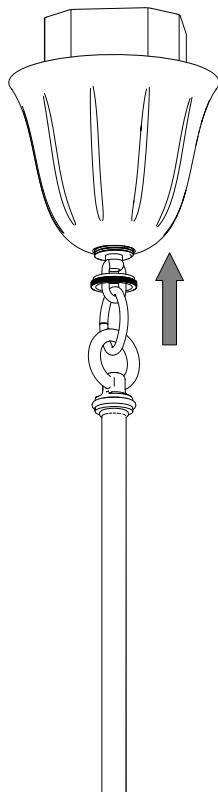

### STEP 10

INSTALLS CENTER BALL ONTO FIXTURE BODY.

RETURN POWER TO CIRCUIT, CONFIRM PROPER OPERATION OF FIXTURE.

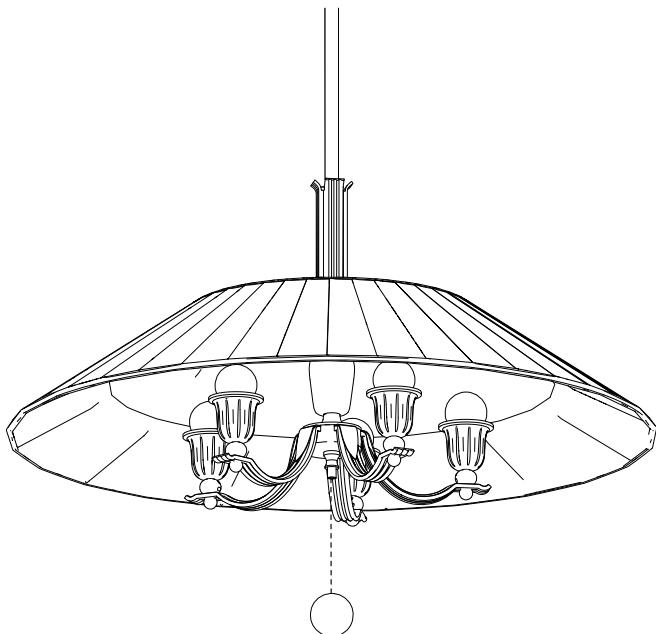

### ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

**GENERAL NOTE:** USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR [INFO@URBANELECTRICCO.COM](mailto:INFO@URBANELECTRICCO.COM)