



## PARLOR V.2

### ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2372

#### GENERAL NOTES


- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- THIS PRODUCT IS RATED FOR ONE 60W MAX, TYPE A BULB.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

#### CAUTION






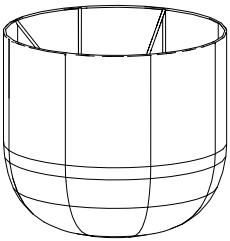



THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.
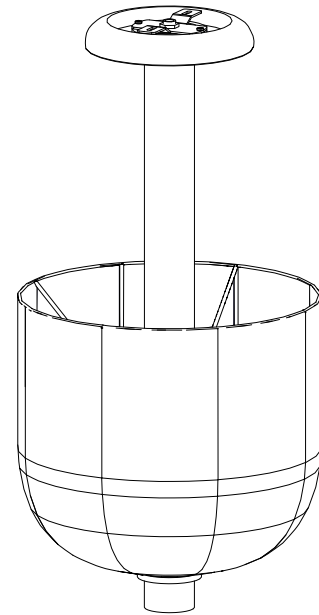
#### WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.



#### COMPONENTS PROVIDED FOR INSTALLATION

<b>ELECTRICAL ASSEMBLY</b> 	<b>CANOPY</b> 	<b>DOWNROD AND NIP</b> 	<b>FINIAL ASSEMBLY</b> 	<b>LOCKNUT</b> 	<b>SHADE</b> 
<b>WIRE NUT (2X)</b> 	<b>PANCAKE BOX MOUNTING PLATE</b> 	<b>BULB</b> 			



## PARLOR V.2

### ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2372


#### MOUNTING INSTRUCTIONS – 2 PERSON INSTALLATION

##### STEP 1

SHUT OFF MAIN ELECTRICAL SUPPLY TO JUNCTION BOX FROM FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT SWITCH IS NOT SUFFICIENT.


##### STEP 2

REMOVE MOUNTING FROM CANOPY BY REMOVING SCREW COLLAR.

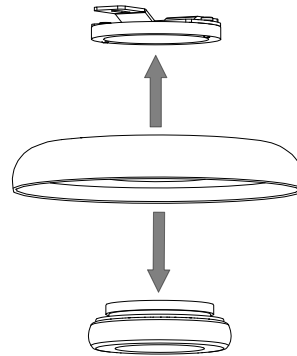


##### STEP 3

INSTALL NIP TO ELECTRICAL ASSEMBLY.

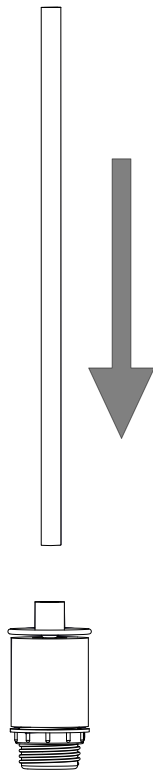

##### STEP 4

SLIDE DOWNROD ONTO NIP.






## PARLOR V.2

### ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2372


#### STEP 5

SLIDE SCREW COLLAR AND CANOPY ONTO DOWNROD.

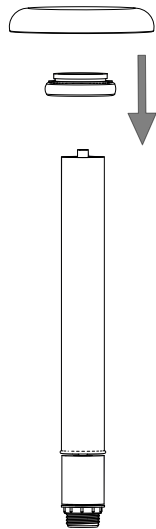

#### STEP 6

ATTACH MOUNTING TO NIP WITH LOCKNUT.

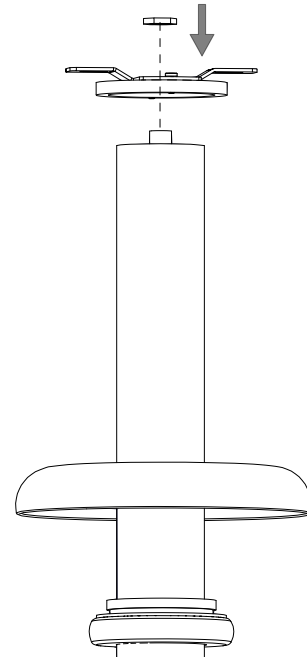


#### STEP 7

**FOR PANCAKE BOX INSTALL SEE STEP 13**


RAISE FIXTURE TO CEILING AND ATTACH TO JUNCTION BOX USING JUNCTION BOX SCREWS.

USING INCLUDED WIRE NUTS, MAKE ELECTRICAL CONNECTIONS USING ELECTRICAL CONFIGURATION TABLE PROVIDED. ENSURE ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

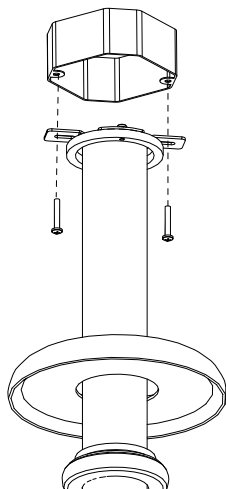

#### STEP 8

SLIDE CANOPY TO CEILING AND SECURE WITH SCREW COLLAR.

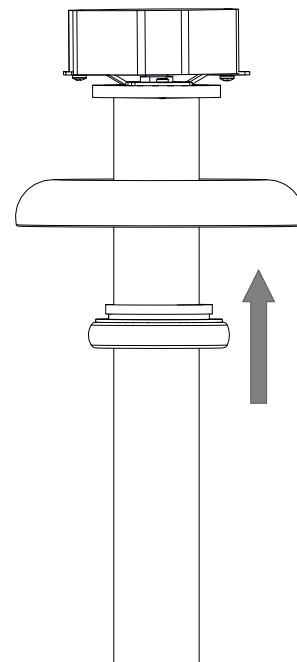




## PARLOR V.2

### ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2372


#### STEP 9

REMOVE TOP OF FINIAL ASSEMBLY FROM BOTTOM PIECE.

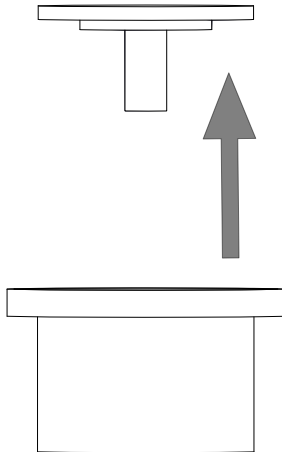

#### STEP 10


INSTALL FINIAL TO BOTTOM OF SHADE.

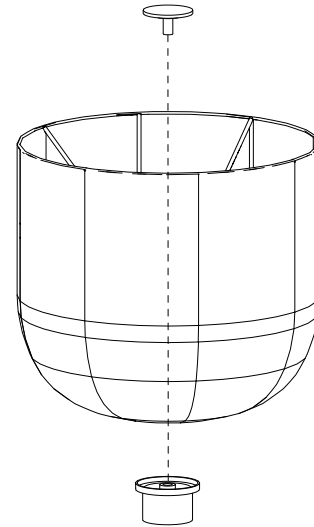

#### STEP 11

REMOVE SHADE COLLAR.

INSTALL SHADE ONTO ELECTRICAL ASSEMBLY WITH SHADE COLLAR.

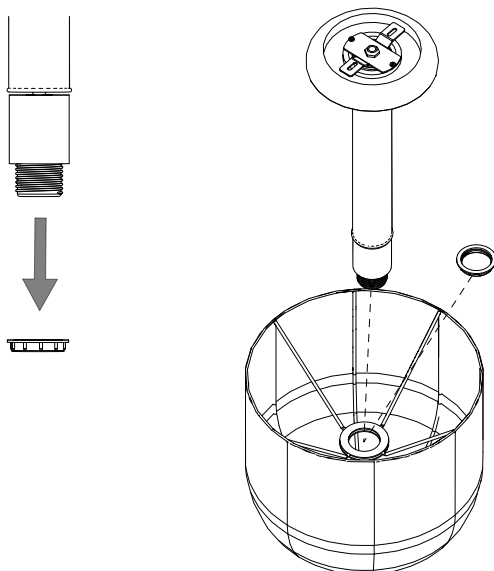

#### STEP 12

INSTALL BULB AND RESTORE POWER TO CIRCUIT TO CONFIRM PROPER OPERATION OF FIXTURE.



## PARLOR V.2

### ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2372

#### STEP 13


##### FOR PANCAKE JUNCTION BOX MOUNTING.

ATTACH MOUNTING PLATE TO JUNCTION BOX USING JUNCTION BOX SCREWS.

RAISE FIXTURE TO CEILING AND MAKE ELECTRICAL CONNECTIONS USING WIRE NUTS PROVIDED AND UL LISTED ELECTRICAL TAPE.

ATTACH FIXTURE TO MOUNTING PLATE WITH CROSSBAR SCREWS.

##### CONTINUE TO STEP 8

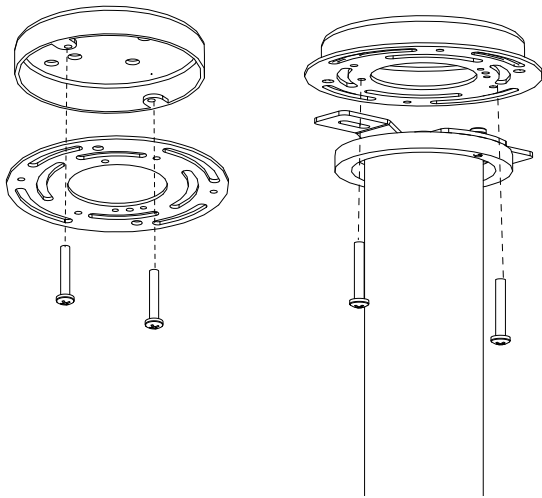

#### ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON MOUNTING PLATE.	

**GENERAL NOTE:** USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT:  
843.723.8140 OR [INFO@URBANELECTRIC.COM](mailto:INFO@URBANELECTRIC.COM)