



POSY PENDANT

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2387

GENERAL NOTES


- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- THIS PRODUCT IS RATED FOR FOUR 60W MAX, TYPE B BULB.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.

WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

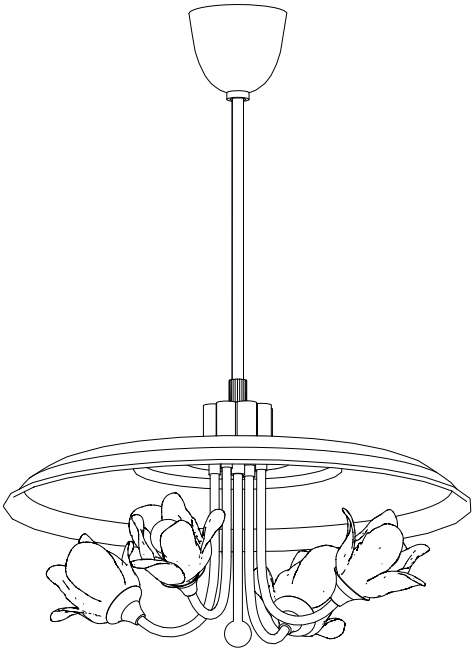

COMPONENTS PROVIDED FOR INSTALLATION

FIXTURE BODY	SPIN	PORCELAIN FLOWER (X4)	CANOPY	CENTER ROD
DOWNROD	RIBBED CAP	RIBBED COUPLER	MOUNTING ASSEMBLY	SCREW COLLAR



POSY PENDANT

ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2387


HEX WRENCH




JUNCTION BOX SCREWS
(X2)



WIRE NUT (2X)



BULB (X4)

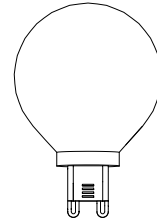


MOUNTING INSTRUCTIONS – 2 PERSON INSTALLATION

STEP 1

SHUT OFF MAIN ELECTRICAL SUPPLY TO JUNCTION BOX FROM FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT SWITCH IS NOT SUFFICIENT.

STEP 2

ATTACH SPIN, RIBBED CAP AND RIBBED COUPLER TO FIXTURE BODY.

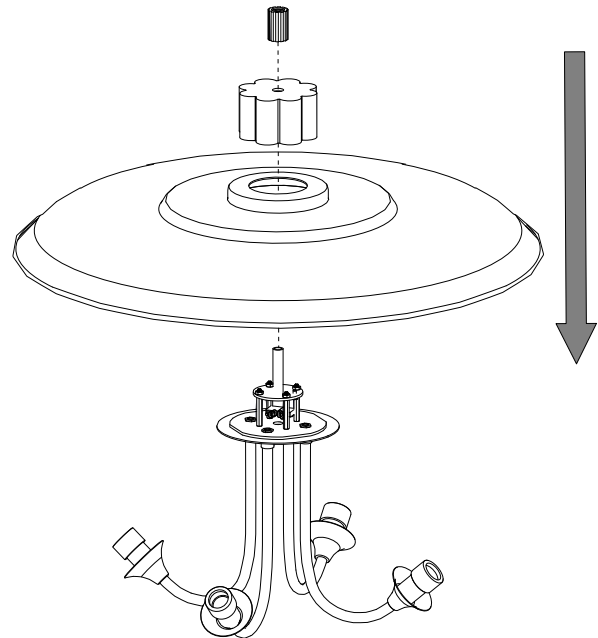



POSY PENDANT ASSEMBLY AND MOUNTING INSTRUCTIONS


UE-2387

STEP 3

ATTACH DOWNROD TO FIXTURE ASSEMBLY.


SLIDE SCREW COLLAR AND CANOPY OVER DOWNROD AND LET REST ON FIXTURE BODY.

GUIDE WIRING THROUGH PIECES DURING ASSEMBLY.

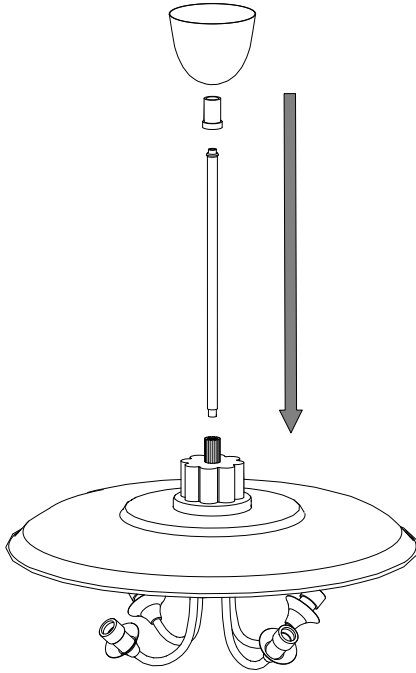

STEP 4


ATTACH MOUNTING ASSEMBLY TO DOWNROD.

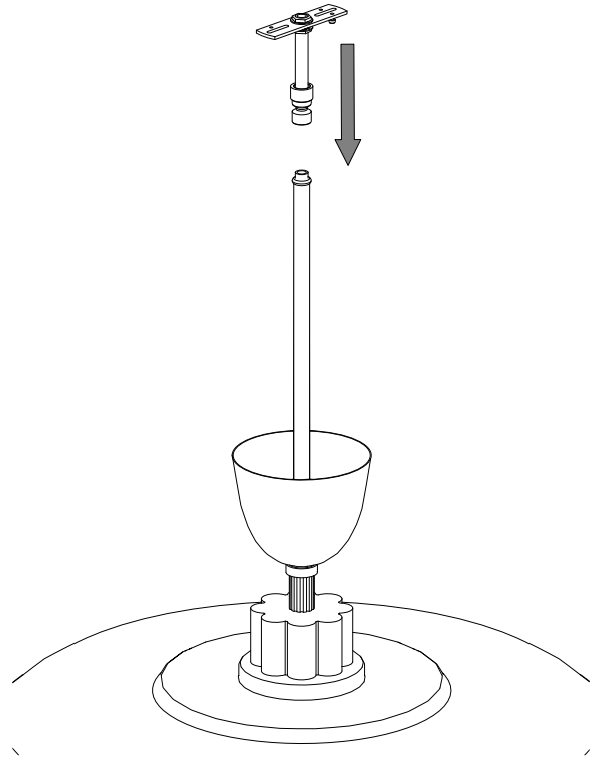

STEP 5


LIFT FIXTURE TO THE CEILING AND ATTACH TO JUNCTION BOX WITH JUNCTION BOX SCREWS.

USING WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING ELECTRICAL CONFIGURATION TABLE PROVIDED. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

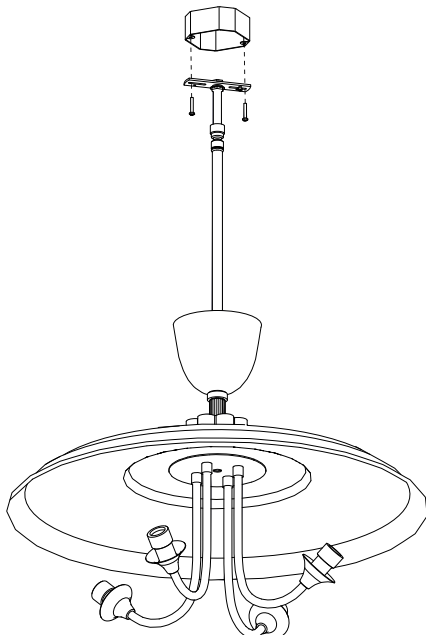

STEP 6

LIFT CANOPY TO CEILING, BEING CAREFUL NOT TO DAMAGE THE FINISH. LIFT SCREW COLLAR TO CANOPY AND SCREW ONTO HANGSTRAIGHT SO THAT CANOPY FITS SNUGLY TO CEILING.

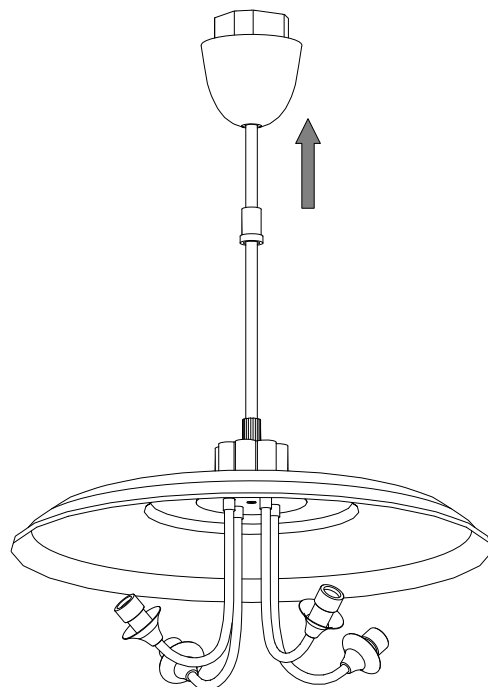




POSY PENDANT ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2387


STEP 7

ATTACH CENTER ROD TO FIXTURE BY THREADING INTO CENTER HOLE.

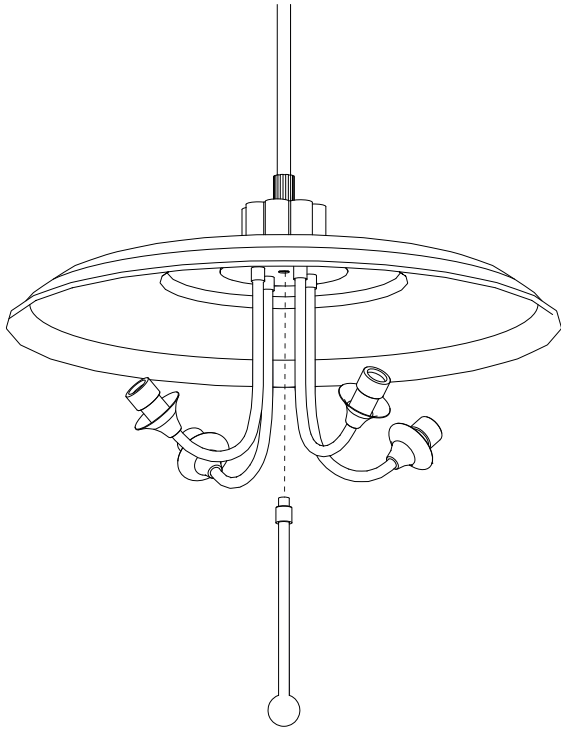

STEP 8


REMOVE SCREW COLLARS FROM ELECTRICAL SOCKETS AND SET ASIDE.

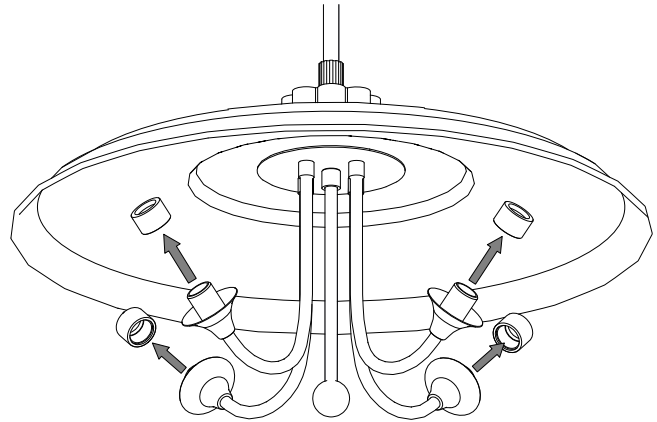

STEP 9

PLACE PORCELAIN FLOWERS ON FIXTURE AND REATTACH SCREW COLLARS TO HOLD IN PLACE.

INSTALL BULBS AND RESTORE POWER TO CIRCUIT. CONFIRM PROPER OPERATION OF LIGHT FIXTURE.

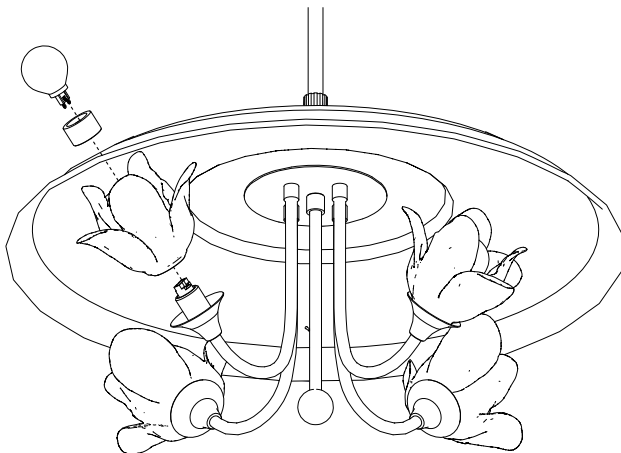



POSY PENDANT ASSEMBLY AND MOUNTING INSTRUCTIONS

UE-2387

ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT TO GREEN GROUND SCREW ON MOUNTING PLATE.	

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT:

843.723.8140 OR INFO@URBANELECTRIC.COM