D1-1545

GENERAL NOTES


- THIS LUMINAIRE IS SUITED FOR DRY LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- THIS PRODUCT IS RATED FOR:
 - HANG REGULAR: 19W LED PANEL
 - HANG LARGE: 39W LED PANEL
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.
 PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.

WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

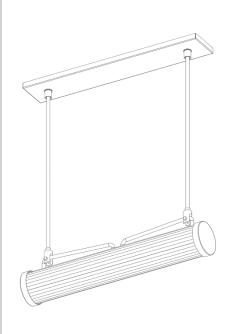

COMPONENTS PROVIDED FOR INSTALLATION

FIXTURE BODY	MOUNTING PLATE ASSEMBLY	(X4) TOGGLE BOLT	(X4) TOGGLE ANCHOR	(X2) DOWNROD	
CANOPY	HEX WRENCH	WIRENUTS	(X24) GLASS ROD		

D1-1545

MOUNTING INSTRUCTIONS - 2 PERSON INSTALLATION REQUIRED


STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.

*** ENSURE THAT LOW VOLTAGE TRANSFORMER IS INSTALLED WITHIN 30FT OF THE JUNCTION BOX BEFORE INSTALLATION OF THE FIXTURE. ***


STEP 2

THREAD THE SCREW COLLARS DOWN THE HANGSTRAIGHTS ON THE DOWNRODS. THEN SLIP THE SCREW COLLARS AND CANOPY DOWN THE DOWNRODS BEING CAREFUL TO NOT DAMAGE THE FINISH. ALLOW THE SCREW COLLARS TO REST ON THE BOTTOM OF THE DOWNRODS.

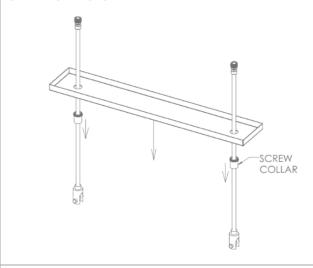

STEP 3

REMOVE THE BRASS CAPS, THREADED STUD, AND COUPLER FROM THE BOTTOM OF EACH DOWNRODS.

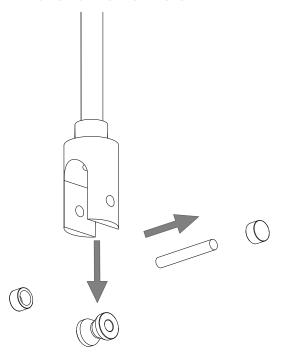


STEP 4


ATTACH FIXTURE BODY TO DOWNRODS.

USING TWO PEOPLE, GUIDE THE WIRING (INCLUDING GROUND) FROM THE FIXTURE BODY THROUGH THE DOWNROD). PLACE THE LIGHT FIXTURE FRAME INTO THE U-SHAPED OPENING AT THE BOTTOM OF THE DOWNRODS. REATTACH THE COUPLER, THREADED STUD, AND BRASS CAPS AS SHOWN AND TIGHTEN TO ALLOW THE LIGHT FIXTURE FRAME TO HANG FROM THE DOWNRODS.

ASSEMBLY AND MOUNTING INSTRUCTIONS

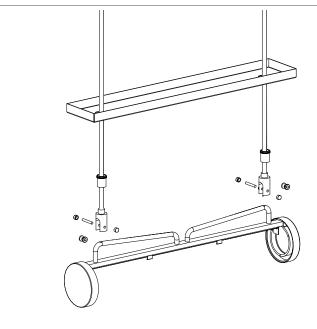


STEP 5 REMOVE BRACKETS FROM MOUNTING PLATE.

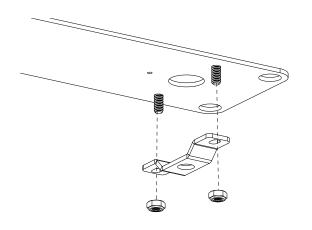

STEP 6

ATTACH MOUNTING PLATE TO CEILING AND JUNCTION BOX, USING TOGGLE ANCHORS AND JUNCTION BOX SCREWS.

PULL HOUSE WIRING THROUGH MOUNTING PLATE.

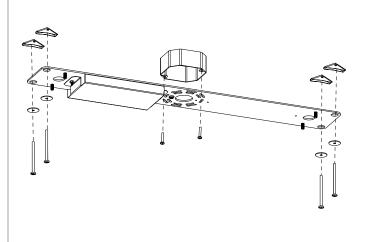


ASSEMBLY AND MOUNTING INSTRUCTIONS

D1-1545


STEP 7

ATTACH MOUNTING BRACKETS TO FIXTURE WITH LOCKNUTS.

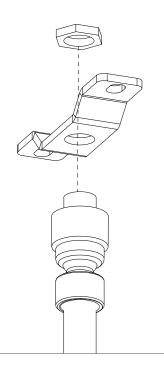

STEP 8

RAISE FIXTURE TO CEILING AND ATTACH TO MOUNTING PLATE WITH HEX NUTS.

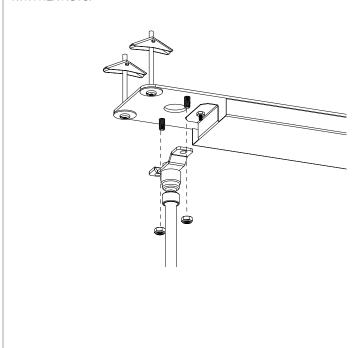


STEP 9

USING WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS. BE SURE TO HIDE CONNECTIONS INSIDE LED SHROUD.

MAKE CONNECTIONS WITH HOUSE WIRING, USE UL APPROVED ELECTRICAL TAPE AND WIRE NUTS.

STEP 10

RAISE CANOPY TO CEILING AND SECURE WITH SCREW COLLARS.

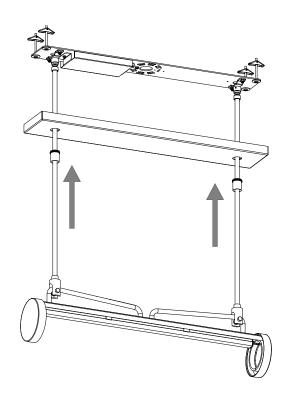


D1-1545


GLASS INSTALLATION

STEP 1

REMOVE THE TWO BRASS CAPS FROM THE ENDS OF THE FIXTURE BODY. SET THE BRASS CAPS ASIDE.

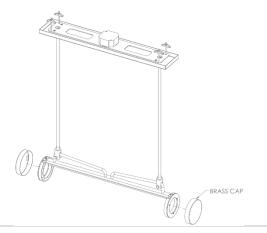


STEP 2

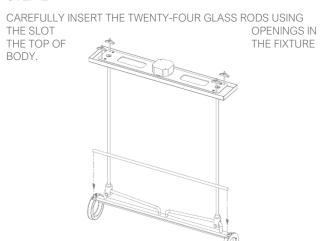

STEP 3

REATTACH THE BRASS CAPS TO THE ENDS OF THE FIXTURE BODY.

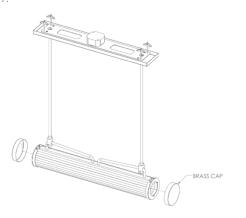

ELECTRICAL CONFIGURATION TABLE

FIXTURE/ LED PANEL	DRIVER OUT	DRIVER IN	HOUSE SUPPLY
RED +12V DC	RED +12V DC	BLACK (HOT)	BLACK OR RED (HOT) HOUSE SUPPLY CIRUIT WIRE
BLUE -12V DC	BLUE -12V DC	WHITE (NEUTRAL)	WHITE (NEUTRAL) HOUSE SUPPLY CIRUIT WIRE

CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON MOUNTING PLATE.

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR INFO@URBANELECTRICCO.COM