BEDOUIN, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2509HR

GENERAL NOTES

- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

NOTICE

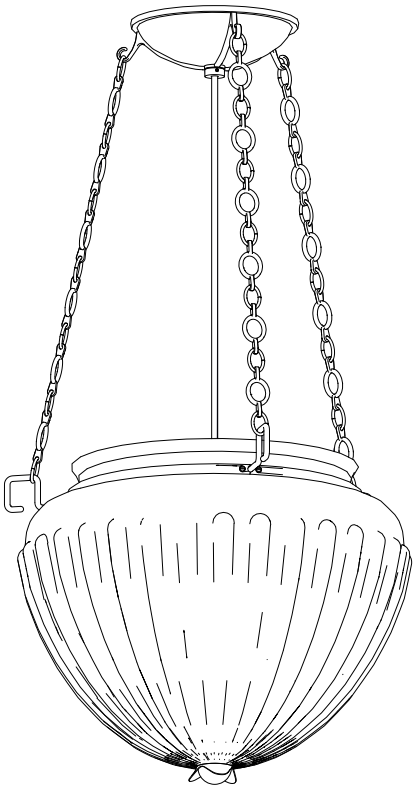
- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- THIS LUMINAIRE IS SUITED FOR DAMP LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- THIS PRODUCT IS RATED FOR ONE 60W TYPE A BULB

⚠ CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.









⚠ WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.



COMPONENTS PROVIDED FOR INSTALLATION

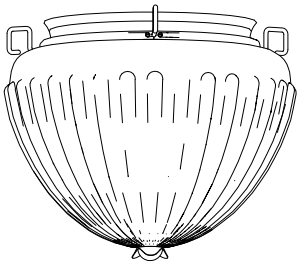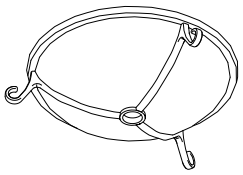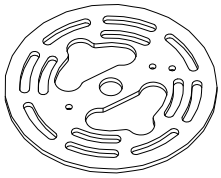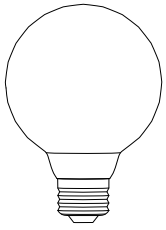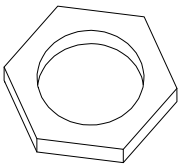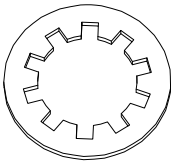BOX 1

GLASS ASSEMBLY 	CANOPY 	ELECTRICAL ASSEMBLY 	CHAIN (X3) 	MOUNTING PLATE 
BULB 	HEX NUT 	WASHER 	JUNCTION BOX SCREW (X2) 	WIRENUT (X3) 

BEDOUIN, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2509HR

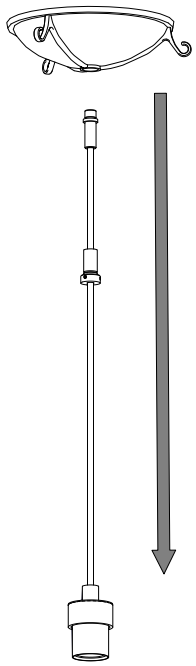
MOUNTING INSTRUCTIONS - 2 PERSON INSTALL

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


STEP 2

UNSCREW SCREW COLLAR AND SLIDE DOWN LENGTH OF ELETRICAL WIRE TO REST ON SOCKET ASSEMBLY. SLIP CANOPY DOWN ELECTRICAL WIRE AND LET REST ON SCREW COLLAR.




STEP 3

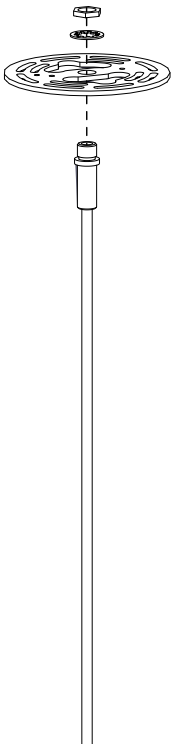ATTACH MOUNTING PLATE TO ELETRICAL ASSEMBLY AND SECURE WITH WASHER AND HEX NUT.



STEP 4

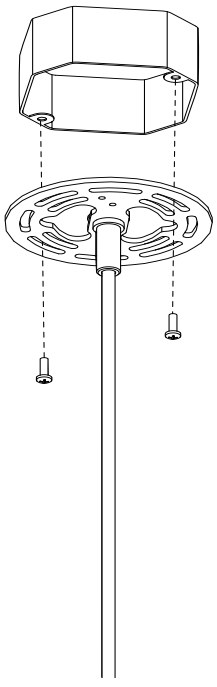LIFT ASSEMBY TO CEILING AND ATTACH TO JUNCTION BOX WITH JUNCTION BOX SCREWS.



BEDOUIN, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2509HR

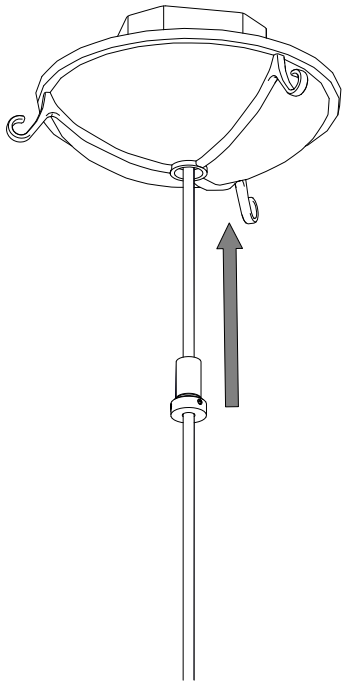
STEP 5

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

IMPORTANT: NEVER ALLOW FIXTURE TO "HANG" FROM ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT PRESSURE ON THE CONNECTIONS. THE WEIGHT OF THE FIXTURE SHOULD BE SUPPORTED BY THE MOUNTING ASSEMBLY.


STEP 6

LIFT CANOPY TO CEILING AND SECURE WITH SCREW COLLAR.



STEP 7

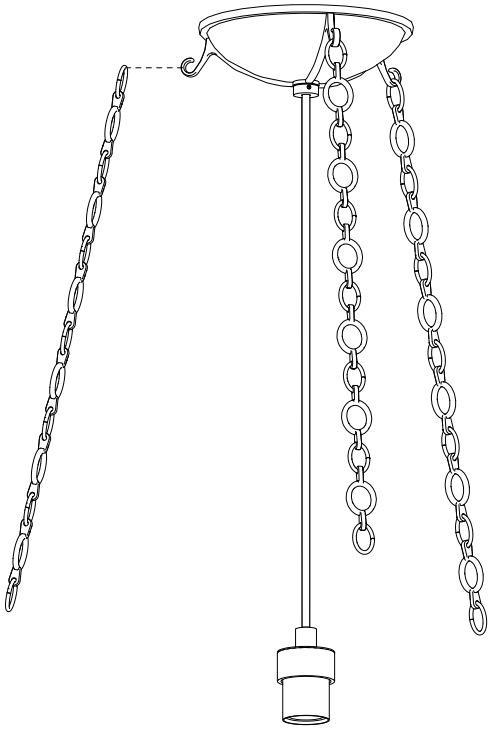
ATTACH CHAINS TO HOOKS ON CANOPY



STEP 8

INSTALL BULB, LIFT GLASS ASSEMBLY OVER ELECTRICAL AND ATTACH TO CHAINS AT HOOKS ON GLASS COLLAR.

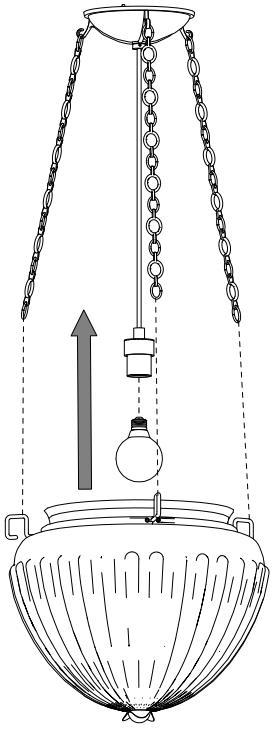RETURN POWER TO CIRCUIT, CONFIRM PROPER OPERATION OF FIXTURE.



BEDOUIN, HR

ASSEMBLY AND MOUNTING INSTRUCTIONS

KF-2509HR

ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR INFO@URBANELECTRICCO.COM