SULLIVAN'S ISLAND - EXTERIOR

ASSEMBLY AND MOUNTING INSTRUCTIONS

JG-2701WR

GENERAL NOTES

- CAREFULLY UNPACK THE LUMINAIRE AND INSPECT FOR DAMAGE.
- PLEASE WEAR GLOVES TO PROTECT THE FINISH OF THE FIXTURE.
- SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

NOTICE


- FOR YOUR SAFETY AND PROPER OPERATION OF LUMINAIRE, READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE COMMENCING INSTALLATION OF THIS LUMINAIRE.
- THIS LUMINAIRE IS SUITED FOR WET LOCATIONS.
- THIS LUMINAIRE IS UL LISTED. WHEN INSTALLING LUMINAIRE, CONFORM TO ALL APPLICABLE LOCAL ELECTRICAL CODES, ORDINANCES, AND THE NATIONAL ELECTRICAL CODE (NEC).
- THIS PRODUCT IS RATED FOR 60W TYPE B BULBS

⚠ CAUTION

THIS PRODUCT SHOULD BE INSTALLED ONLY BY A LICENSED ELECTRICIAN.










⚠ WARNING

THE ELECTRICITY MUST BE TURNED OFF AT THE MAIN FUSE BOX BEFORE INSTALLING THIS LUMINAIRE. TURNING POWER OFF USING THE LIGHT SWITCH MAY NOT BE SUFFICIENT TO PREVENT ELECTRICAL SHOCK.

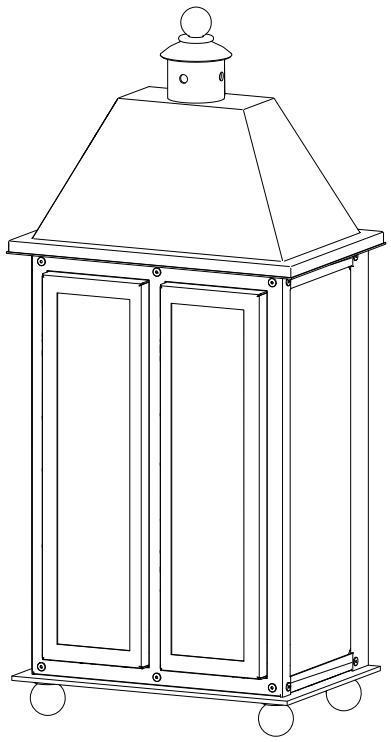

COMPONENTS PROVIDED FOR INSTALLATION

BOX 1

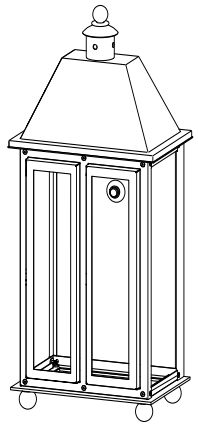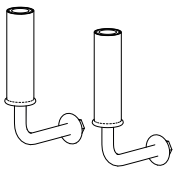
FIXTURE BODY 	ELECTRICAL SOCKETS (X2) 	MOUNTING PLATE 	BRACKET 
	MOUNTING SCREW (X4) 	WALL ANCHOR (X4) 	GLASS CLIPS (X8) 
BUTTON HEAD SCREW 	JUCNTION BOX SCREWS (X2) 	WIRENUTS (X2) 	HEX WRENCH 

BOX 2

FRONT GLASS (X2)



SIDE GLASS (X2)



SULLIVAN'S ISLAND - EXTERIOR

ASSEMBLY AND MOUNTING INSTRUCTIONS

JG-2701WR


MOUNTING INSTRUCTIONS - 1 PERSON INSTALL

STEP 1

SHUT OFF THE MAIN ELECTRICAL SUPPLY TO THE JUNCTION BOX FROM THE FUSE BOX/CIRCUIT BREAKER. TURNING POWER OFF AT THE SWITCH IS NOT SUFFICIENT.


STEP 2

INSERT SIDE GLASS FROM BOTTOM OF FIXTURE BODY. FIT GLASS INTO CHANNEL AND SECURE WITH 2 GLASS CLIPS FOR EACH PANE. WITH CLIP BETWEEN INTERIOR OF GLASS AND CHANNEL WALL.

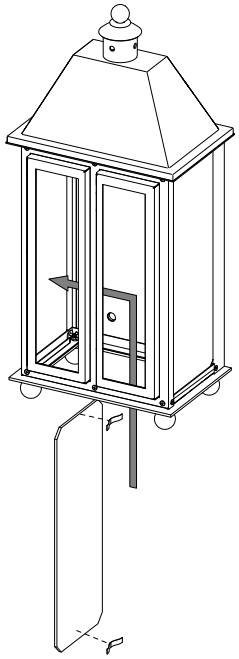


STEP 3

INSERT FRONT GLASS FROM BOTTOM OF FIXTURE BODY. FIT GLASS INTO CHANNEL AND SECURE WITH 2 GLASS CLIPS FOR EACH PANE. WITH CLIP BETWEEN INTERIOR OF GLASS AND CHANNEL WALL.

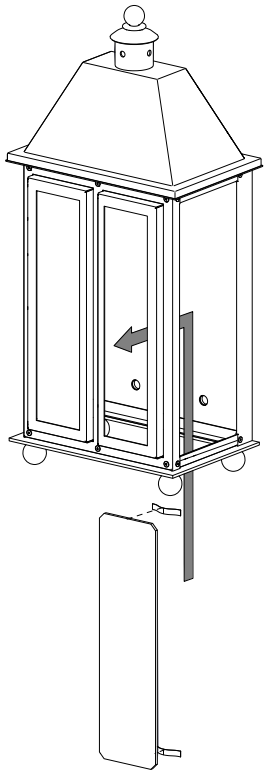

STEP 4

REMOVE HEX NUTS FROM ARMS OF ELECTRICAL SOCKETS. INSERT ARMS THROUGH FIXTURE BODY AND HOLES IN BRACKET. REATTACH HEX NUTS TO ELETRICAL ARMS.

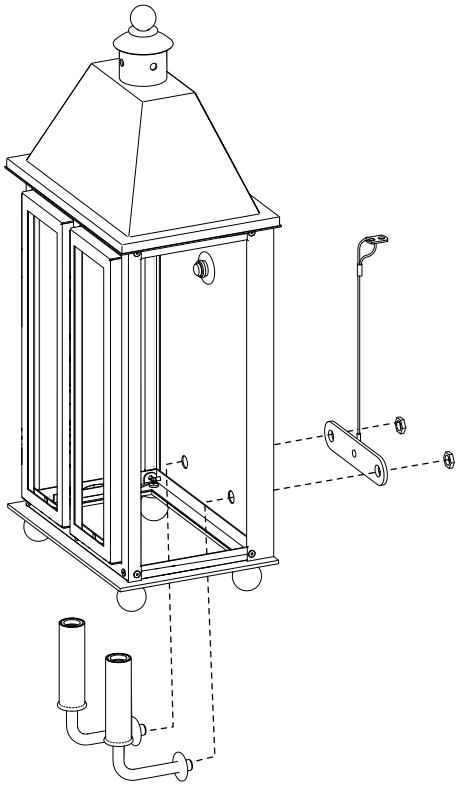


SULLIVAN'S ISLAND - EXTERIOR

ASSEMBLY AND MOUNTING INSTRUCTIONS

JG-2701WR


STEP 5

USE MOUNTING PLATE TO MARK HOLES FOR WALL ANCHORS. INSTALL WALL ANCHORS. ATTACH MOUNTING PLATE TO WALL ANCHORS WITH MOUNTING SCREWS AND TO JUCNTION BOX WITH JUNCTION BOX SCREWS.

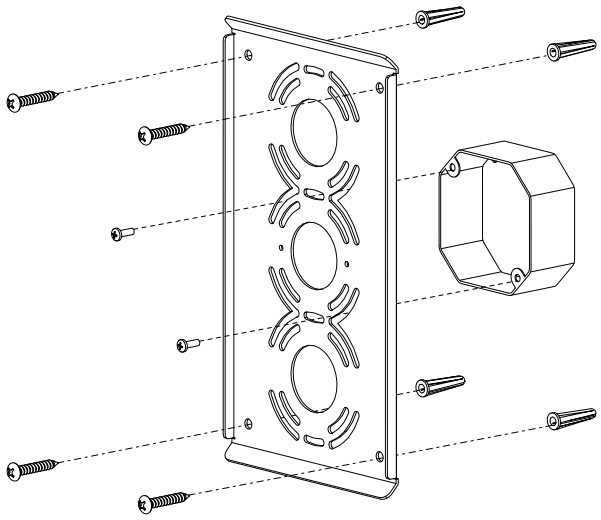

STEP 6

ATTACH STEEL LANYARD TO MOUNTING PLATE WITH BUTTON HEAD SCREW.

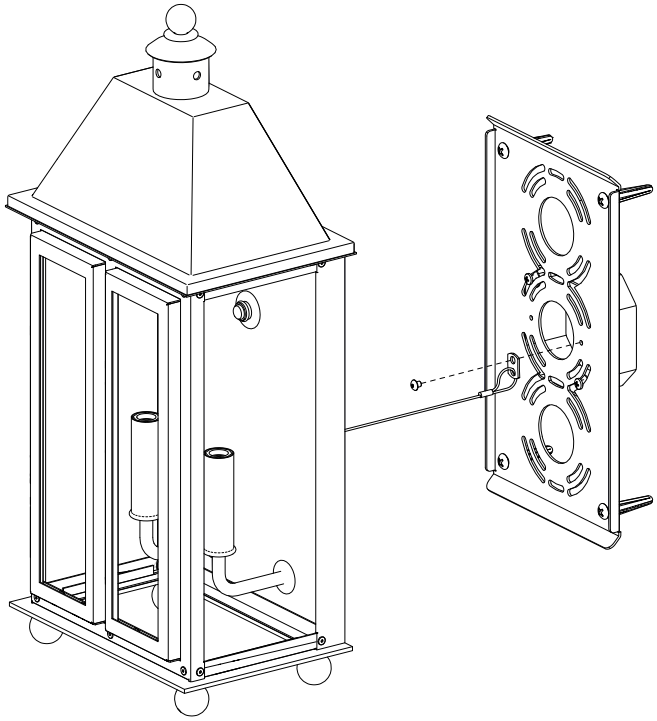


STEP 7

USING THE WIRE NUTS PROVIDED, MAKE ELECTRICAL CONNECTIONS BY FOLLOWING THE ELECTRICAL CONFIGURATION TABLE BELOW. ENSURE THAT ALL ELECTRICAL CONNECTIONS ARE WRAPPED WITH UL-LISTED ELECTRICAL TAPE.

IMPORTANT: NEVER ALLOW FIXTURE TO "HANG" FROM ELECTRICAL CONNECTIONS OR TO OTHERWISE PUT PRESSURE ON THE CONNECTIONS. THE WEIGHT OF THE FIXTURE SHOULD BE SUPPORTED BY THE MOUNTING ASSEMBLY.

STEP 8

LOOSEN SET SCREWS AT BASE OF FIXTURE BODY USING PROVIDED HEX WRENCH. SLIP FIXTURE BODY OVER MOUNTING PLATE AND TIGHTEN SET SCREWS.

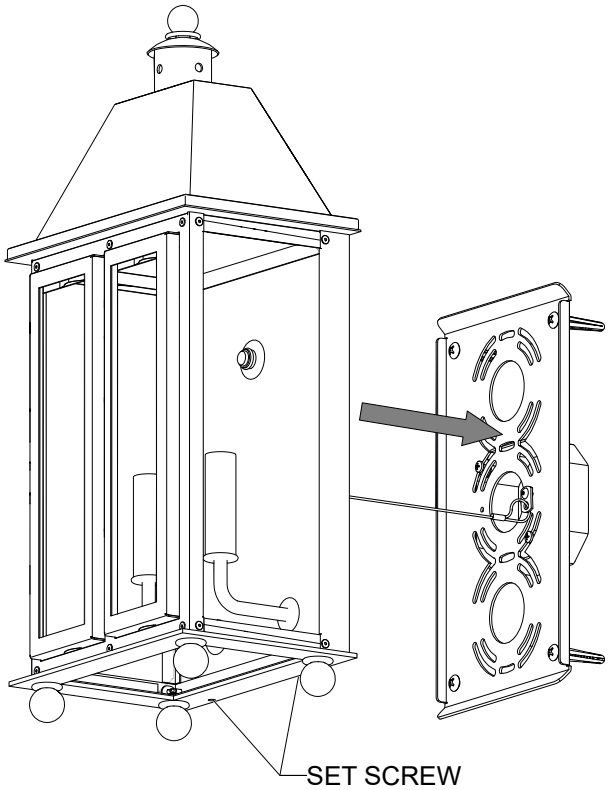


SULLIVAN'S ISLAND - EXTERIOR

ASSEMBLY AND MOUNTING INSTRUCTIONS

JG-2701WR

STEP 9

INSTALL THE LIGHT BULBS IN THE FIXTURE SOCKETS AND RESTORE POWER TO THE CIRCUIT. CONFIRM PROPER OPERATION OF THE LIGHT FIXTURE.

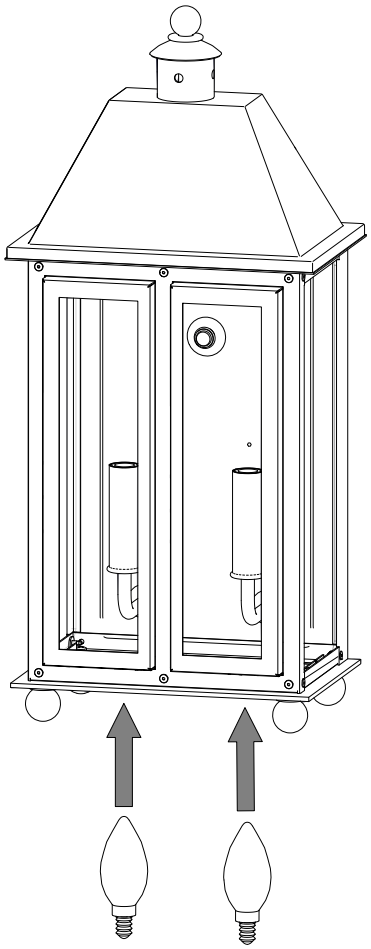

ELECTRICAL CONFIGURATION TABLE

FROM HOME	FROM LUMINAIRE
CONNECT BLACK OR RED (HOT) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE ROUND/BLACK WIRE (HOT)
CONNECT WHITE (NEUTRAL) HOUSE SUPPLY CIRCUIT WIRE TO:	LUMINAIRE RIBBED/WHITE WIRE (NEUTRAL)
CONNECT GREEN INSULATED OR BARE COPPER (GROUND -) HOUSE SUPPLY CIRCUIT WIRE AND LUMINAIRE BARE STRANDED WIRE (GROUND -) TO GREEN GROUND SCREW ON CROSSBAR.	

GENERAL NOTE: USE UL LISTED WIRE NUTS FOR THE WIRING CONNECTIONS IN THIS LUMINAIRE. WRAP WIRE NUT CONNECTIONS WITH UL LISTED ELECTRICAL TAPE.

FOR QUESTIONS, PLEASE CONTACT CLIENT SERVICES AT: 843.723.8140 OR INFO@URBANELECTRICCO.COM